


Series¹⁰⁻₂₁₋VQ1000/2000

5 Port Solenoid Valve

Base Mounted

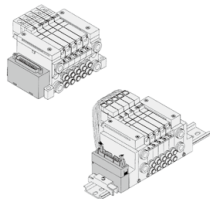

Manifold type	Series	D-sub connector	Flat ribbon cable	Connector	Serial
Plug-in	10-21-VQ1000	●	●	—	●
	10-21-VQ2000	●	●	—	●

¹⁰⁻₂₁₋VQ1000

How to Order, Manifold Options

P. 515

¹⁰⁻₂₁₋VQ2000

 
How to Order, Manifold Options

P. 517

¹⁰⁻₂₁₋VQ1000/2000

Model, Standard/Manifold Specifications

P. 521



¹⁰⁻₂₁₋VQ1000/2000

F kit (D-sub connector)

 
P. 523



¹⁰⁻₂₁₋VQ1000/2000

P kit (Flat ribbon cable)


P. 527



¹⁰⁻₂₁₋VQ1000/2000

T kit (Terminal block box)

 
P. 539



¹⁰⁻₂₁₋VQ1000/2000

L kit (Lead wire)

P. 543

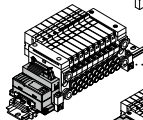

¹⁰⁻₂₁₋VQ1000/2000

S kit (Serial transmission) EX510

 
P. 547



¹⁰⁻₂₁₋VQ1000/2000

S kit (Serial transmission) EX120/124

P. 551



¹⁰⁻₂₁₋VQ2000

M kit (Circular connector)

P. 557

¹⁰⁻₂₁₋VQ2000

Sub-plate Single Unit

P. 560

¹⁰⁻₂₁₋VQ1000/2000

Semi-standard

P. 561

¹⁰⁻₂₁₋VQ1000/2000

Construction

P. 564

¹⁰⁻₂₁₋VQ1000/2000

Exploded View of Manifold

P. 567

¹⁰⁻₂₁₋VQ1000/2000

Manifold Optional Parts

P. 571

¹⁰⁻₂₁₋VQ1000/2000

Specific Product Precautions

P. 575


Series ¹⁰⁻₂₁₋VQ1000

Base Mounted Plug-in Unit

Note 1) For CE compliant models, DC-type only.



How to Order Manifold

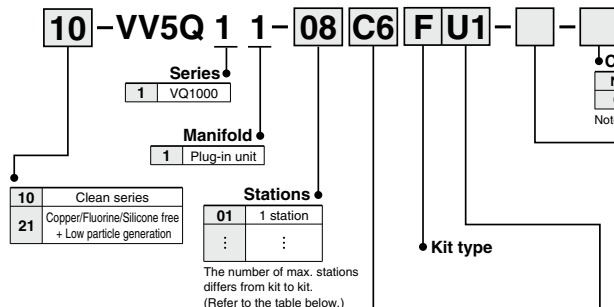

Cylinder port

Symbol	Port size	Symbol	Port size
C3	With ø3.2 One-touch fitting	L5	Top ported elbow M5 thread
C4	With ø4 One-touch fitting	B3	Bottom ported elbow with ø3.2 One-touch fitting
C6	With ø6 One-touch fitting	B4	Bottom ported elbow with ø4 One-touch fitting
M5	M5 thread	B6	Bottom ported elbow with ø6 One-touch fitting
CM ^{Note 1)}	Mixed sizes and with port plug	B5	Bottom ported elbow M5 thread
L3	Top ported elbow with ø3.2 One-touch fitting	LM ^{Note 1)}	Elbow port, mixed sizes
L4	Top ported elbow with ø4 One-touch fitting	MM ^{Note 2)}	Mixed size for different types of piping, option installed
L6	Top ported elbow with ø6 One-touch fitting		

Note 1) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
 Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions on the manifold specification sheet.
 Note 3) Inch-size One-touch fittings are also available. Refer to page 563 for details.
 Note 4) M5 fittings for M5 thread are attached without being incorporated.

Simple specials are available with SMC Simple Specials System.
 Refer to the **WEB catalog** for details on applicable models.

Kit type/Electrical entry/Cable length

F kit (D-sub connector)

Note 1) 25P

Connector entry direction
Top entry Side entry

U0	S0	Without cable	Note 2)
F	S1	With cable (1.5 m)	2 to 24
U1	S2	With cable (3 m)	stations
U2	S3	With cable (5 m)	

P kit (Flat ribbon cable)

Note 1) 26P

Connector entry direction
Top entry Side entry

U0	S0	Without cable	Note 2)
P	S1	With cable (1.5 m)	2 to 24
U1	S2	With cable (3 m)	stations
U2	S3	With cable (5 m)	

P. 523 P. 527

Note 1) Besides the above, F/P kit with different number of pins are available. Refer to page 561 for details.
 Note 2) Refer to page 562 for details.

(Note) For CE compliant models, DC-type only. **CE** [Option]

How to Order Valve

How to Order Manifold Assembly

10-VQ 1 1 0 0 - 5 - 1 -

Series
1 VQ1000

10 Clean series
21 Copper/Fluorine/Silicone free + Low particle generation

Seal
0 Metal seal
1 Rubber seal

Actuation type
1 2-position single (A/B)
2 2-position double (A/B)
3 3-position closed center (A/B)
4 3-position exhaust center (A/B)
5 3-position pressure center (A/B)

Function
Nil Standard (0.4 W) (Note 1)
B High-speed response type (0.95 W)
K High-pressure type (1.0 MPa) (0.95 W)
N Negative common
R External pilot

Manual override
Nil: Non-locking push type (Tool required)
B: Locking type (Tool required)
C: Locking type (Manual)
D: Slide locking type (Manual)


Light/surge voltage suppressor
E Note) Yes
None

Coil voltage
1 100 VAC (50/60 Hz)
2 200 VAC (50/60 Hz)
3 110 VAC (50/60 Hz)
4 220 VAC (50/60 Hz)
5 24 VDC
6 12 VDC

CE compliant
Nil
Q CE compliant
(Note) For CE compliant models, DC-type only.

Note 1 Refer to page 522 for power consumption of AC type.
Note 2 Metal seal only
Note 3 For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
Note 4 When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Example

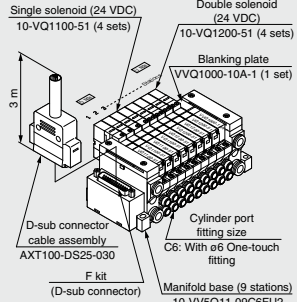

10-VV5Q11-09C6FU2 ... 1 set (If kit 9-station manifold base part no.)
*10-VQ1100-51 ... 4 sets (Single solenoid part no.)
*10-VQ1200-51 ... 4 sets (Double solenoid part no.)
*VVQ1000-10A-1 ... 1 set (Blanking plate part no.)

The asterisk denotes the symbol for assembly.
Prefix it to the part no. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.

Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

T kit (Terminal block box)
P. 539
T kit 0 Terminal block box 2 to 24 stations (Note 2)

L kit (Lead wire)
P. 543
L kit 0 With cable (0.6 m)
1 With cable (1.5 m)
2 With cable (3 m)
1 to 8 stations

S kit (Serial transmission)
P. 551
The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. The dust proof SI unit is also available. Refer to page 551 for details.
(Note) Refer to "SI Unit Part No." on page 551 when ordering the CE-compliant SI unit.

SI kit
0 Without SI unit (Note 2)
H NKE Corp.: Fieldbus H System Max. 16 stations
Q DeviceNet® Max. 16 stations
R1 OMRON Corp.: CompoBus/S (16 outputs)
R2 OMRON Corp.: CompoBus/S (8 outputs) Max. 8 stations
V CC-Link
ZB CompoNet® (Positive common) Max. 16 stations
ZBN CompoNet® (Negative common)

Series 10-21-VQ2000

Base Mounted
Plug-in Unit

Note) For CE compliant
models, DC-type only.



How to Order Manifold

10-VV5Q 2 1-08 C6 F U1

Series
10 Clean series
21 Copper/Fluorine/Silicone free + Low particle generation

Manifold
1 Plug-in unit

Stations
01 1 station
⋮ ⋮

Cylinder port

Symbol	Port size
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
C8	With ø8 One-touch fitting
CM (Note 1)	Mixed sizes and with port plug
L4	Top ported elbow with ø4 One-touch fitting
L6	Top ported elbow with ø6 One-touch fitting

Note 1) Indicate "Mixed size and with port plug" by means of the manifold specification sheet.
Note 2) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.
Note 3) Inch-size One-touch fittings are also available. Refer to page 563 for details.

Kit type

Symbol	Port size
L8	Top ported elbow with ø8 One-touch fitting
B4	Bottom ported elbow with ø4 One-touch fitting
B6	Bottom ported elbow with ø6 One-touch fitting
B8	Bottom ported elbow with ø8 One-touch fitting
LM (Note 1)	Elbow port, mixed sizes
MM (Note 2)	Mixed size for different types of piping, option installed

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Option

Symbol	Option
Nil	None
2	200/220 VAC models (F/L kit only)
B (Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D (Note 5)	DIN rail length specified
K (Note 3)	Special wiring spec. (Except double wiring)
N	With name plate
R (Note 4)	External pilot

The maximum and minimum number of stations are varied depending on kit. (Refer to the below table.)

Simple specials are available with SMC Simple Specials System. Refer to the **WEB catalog** for details on applicable models.

Kit type/Electrical entry/Cable length

F kit (D-sub connector)

Connector entry direction
Top entry Side entry

U0	S0	Without cable	Note 2)
F kit	S1	With cable (1.5 m)	2 to 24 stations
U2	S2	With cable (3 m)	
U3	S3	With cable (5 m)	

P. 523

P kit (Flat ribbon cable)

Connector entry direction
Top entry Side entry

U0	S0	Without cable	Note 2)
P kit	S1	With cable (1.5 m)	2 to 24 stations
U2	S2	With cable (3 m)	
U3	S3	With cable (5 m)	

P. 527

T kit (Terminal block box)

Dust-tight/Water-jet-proof (IP65) compatible (Note 3)

P. 539

L kit (Lead wire)

Dust-tight/Water-jet-proof (IP65) compatible (Note 3)

P. 543

S kit (Serial transmission)

The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. The dusttight SI unit is available. Refer to page 551 for details. Dust-tight, Water-jet-proof (IP65) is available. (Note 3)

Note) Refer to "SI Unit Part No." on page 551 when ordering the CE-compliant SI unit.

P. 551

U0	S0	Without SI unit	Note 2)
H	NKE Corp.: Fieldbus H System		Max. 16 stations
Q	DeviceNet®		Max. 16 stations
R1	OMRON Corp.: CompoBus/S (16 outputs)		Max. 9 stations
R2	OMRON Corp.: CompoBus/S (8 outputs)		Max. 16 stations
V	CC-Link		Max. 16 stations
ZB	CompoNet® (Positive common)		
ZBN	CompoNet® (Negative common)		

M kit (Circular connector)

Dust-tight/Water-jet-proof (IP65) compatible (Note 3)

P. 557

U0	S0	Without cable	Note 2)
1	1	With cable (1.5 m)	2 to 24 stations
2	2	With cable (3 m)	
3	3	With cable (5 m)	

Note 1) Besides the above, F/P kit with different number of pins are available.

Refer to page 561 for details.

Note 2) Refer to page 562 for details.

Note 3) Refer to the pages on respective kits for IP65 type. (T/L/S/M kit)

Note 4) Serial transmission system with IP65 enclosure applicable to input/output is also available. Refer to page 555 for details.

Note) For CE compliant models, DC-type only.



How to Order Valve

How to Order Manifold Assembly

10-VQ 2 1 0 0 - 5 - - - 1 -

Series	
2	VQ2000
10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Actuation type

1	2-position single (A/B)	
	(R1)(P1)(R2)	
2	Metal 2-position double	
	(R1)(P1)(R2)	
3	Rubber 2-position double	
	(R1)(P1)(R2)	
4	3-position closed center (A/B)	
	(R1)(P1)(R2)	
5	3-position exhaust center (A/B)	
	(R1)(P1)(R2)	
6	3-position pressure center (A/B)	
	(R1)(P1)(R2)	

Note) For sub-plate single unit type, refer to page 560.

Seal

0	Metal seal
1	Rubber seal

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Enclosure

Nil	—
W	Dust-tight/water-jet-proof type (IP65)

Note) T, L, S and M kits only

Light/surge voltage suppressor

Nil	Yes
E	None

Note) Not applicable to the S kit.

Coil voltage

		CE compliant
1	100 VAC (50/60 Hz)	—
2	200 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
4	220 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●

Note) 200 and 220 VAC: F/L kit only

Manual override

Nil: Non-locking push type (Tool required)	
B: Push-locking slotted type (Tool required)	
C: Locking type (Manual)	
D: Slide locking type (Manual)	

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ Note 1)
B	High-speed response type	(0.95 W) ○	—
K	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N	Negative common	○	—
R	External pilot	○	○


Note 1) For power consumption of AC type, refer to page 522.

Note 2) Metal seal only

Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Example

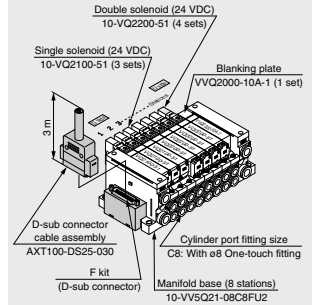

10-VV5Q21-08C8FU2 ... 1 set (F kit 8-station manifold base part no.)
 *10-VQ2200-51 ... 3 sets (Single solenoid part no.)
 *10-VQ2200-51 ... 4 sets (Double solenoid part no.)
 *VVQ2000-10A-1 ... 1 set (Blanking plate part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part no. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.


Caution

Use the standard (DC) specification when continuously energizing for long periods of time.


10-**VQ1000: Manifold Options**

P. 571 to 572


Blanking plate assembly
VVQ1000-10A-1

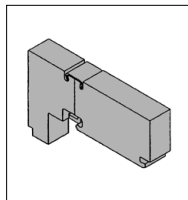


Individual SUP spacer
VVQ1000-P-1-C6
N7

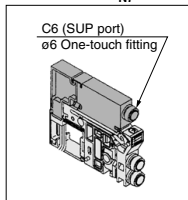


Individual EXH spacer
VVQ1000-R-1-C6
N7

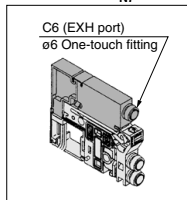


SUP block plate
VVQ1000-16A

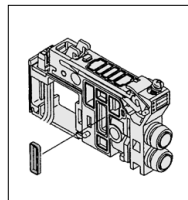


EXH block base assembly
VVQ1000-19A-
F C3, C4
C6, M5
P1, N3
N7

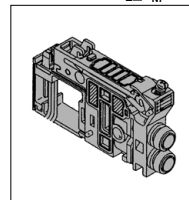


Back pressure check valve
assembly [-B]
VVQ1000-18A

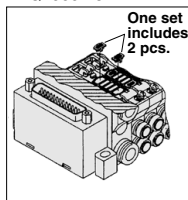


Name plate [-N]
VVQ1000-N-Station
(1 to Max. stations)

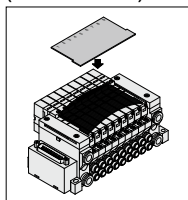

Blanking plug
KQ2P-□

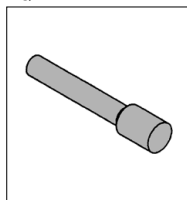


DIN rail mounting bracket
[-D/-D0/-D□]
VVQ1000-57A

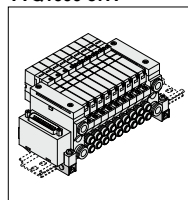


10-**VQ2000: Manifold Options**

P. 573 to 574


Blanking plate assembly
VVQ2000-10A-1

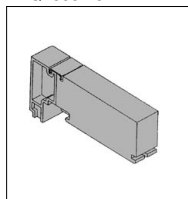


Individual SUP spacer
VVQ2000-P-1-C8
N9

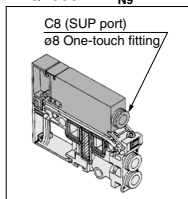


Individual EXH spacer
VVQ2000-R-1-C8
N9

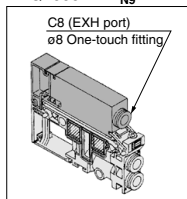


SUP block plate
VVQ2000-16A

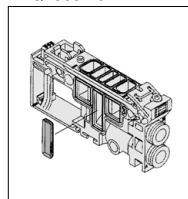


EXH block plate
VVQ2000-19A

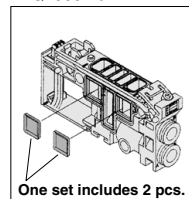


Back pressure check valve
assembly [-B]
VVQ2000-18A

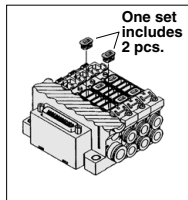


Name plate [-N]
VVQ2000-N-Station
(1 to Max. stations)

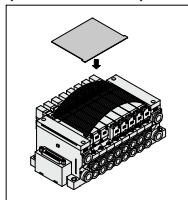

Blanking plug
KQ2P-□

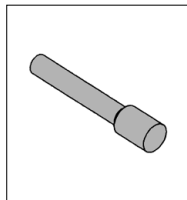

DIN rail mounting bracket
[-D/-D0/-D□]
VVQ2000-57A

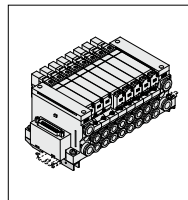

Pressure Switches/
Pressure Sensors

Flow Control
Equipment

Fittings & Tubing

Pressure Control
Equipment

Modular F. R.

Air Preparation
Equipment

Air Grippers

Rotary Actuators

Air Cylinders

Directional
Control Valves

Series ¹⁰⁻₂₁₋VQ1000/2000

Base Mounted
Plug-in Unit



Model

Series	Actuation type		Model	Flow rate characteristics ^{Note 1)}						Response time (ms) ^{Note 2)}			Weight (g)	
				1 → 2/4 (P → A/B)			2/4 → 3/5 (A/B → R1/R2)			Standard: 0.4 W	High-speed response: 0.95 W	AC		
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv					
VQ1000	2-position	Single	Metal seal ^{10- 21-} VQ1100	0.70	0.15	0.16	0.72	0.25	0.18	15 or less	12 or less	29 or less	67	
			Rubber seal ^{10- 21-} VQ1101	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	34 or less		
		Double	Metal seal ^{10- 21-} VQ1200	0.70	0.15	0.16	0.72	0.25	0.18	13 or less	10 or less	13 or less		77
			Rubber seal ^{10- 21-} VQ1201	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	20 or less		
	Closed center	Metal seal ^{10- 21-} VQ1300	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less			
		Rubber seal ^{10- 21-} VQ1301	0.70	0.20	0.16	0.65	0.42	0.18	33 or less	25 or less	47 or less			
	Exhaust center	Metal seal ^{10- 21-} VQ1400	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less			
		Rubber seal ^{10- 21-} VQ1401	0.70	0.20	0.16	1.0	0.30	0.25	33 or less	25 or less	47 or less			
	Pressure center	Metal seal ^{10- 21-} VQ1500	0.70	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less			
		Rubber seal ^{10- 21-} VQ1501	0.85	0.20	0.21	0.65	0.42	0.18	33 or less	25 or less	47 or less			
VQ2000	2-position	Single	Metal seal ^{10- 21-} VQ2100	2.0	0.15	0.46	2.6	0.15	0.60	29 or less	22 or less	49 or less	95	
			Rubber seal ^{10- 21-} VQ2101	2.2	0.28	0.55	3.2	0.30	0.80	31 or less	24 or less	51 or less		
		Double	Metal seal ^{10- 21-} VQ2200	2.0	0.15	0.46	2.6	0.15	0.60	20 or less	15 or less	20 or less		105
			Rubber seal ^{10- 21-} VQ2201	2.2	0.28	0.55	3.2	0.30	0.80	26 or less	20 or less	26 or less		
	Closed center	Metal seal ^{10- 21-} VQ2300	2.0	0.15	0.46	2.0	0.18	0.46	38 or less	29 or less	58 or less			
		Rubber seal ^{10- 21-} VQ2301	2.0	0.28	0.49	2.2	0.31	0.60	44 or less	34 or less	64 or less			
	Exhaust center	Metal seal ^{10- 21-} VQ2400	2.0	0.15	0.46	2.6	0.15	0.60	38 or less	29 or less	58 or less			
		Rubber seal ^{10- 21-} VQ2401	2.0	0.28	0.49	3.2	0.30	0.80	44 or less	34 or less	64 or less			
	Pressure center	Metal seal ^{10- 21-} VQ2500	2.4	0.17	0.57	2.0	0.18	0.46	38 or less	29 or less	58 or less			
		Rubber seal ^{10- 21-} VQ2501	3.2	0.28	0.80	2.2	0.31	0.60	44 or less	34 or less	64 or less			


Note 1) The values are given for port size C6: (10-VQ1000), C8: (10-VQ2000) without back pressure check valve.

Note 2) As per JIS B 8375-1981 (Supply pressure 0.5 MPa; with indicator light/surge voltage suppressor; clean air

The response time is subject to the pressure and quality of the air.) The values at the time of ON are given for double types.

Standard Specifications

Symbol

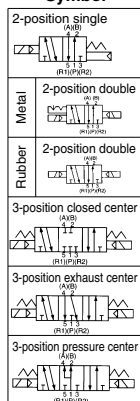

Valve specifications	Valve type	Metal seal	Rubber seal
	Fluid	Air, Inert gas	Air, Inert gas
	Maximum operating pressure	0.7 MPa (High-pressure type: 1.0 MPa)	0.7 MPa
	Minimum operating pressure	Single	0.1 MPa
		Double	0.1 MPa
		3-position	0.1 MPa
		4-position	0.2 MPa
	Ambient and fluid temperature	-10 to 50°C (Note 1)	
	Lubrication	Not required	
	Manual override	Push type, Locking type (Tool required, Manual) semi-standard	
Electrical specifications	Impact/Vibration resistance (Note 2)	150/30 m/s ²	
	Enclosure	Dust-protected; Dust-tight, Water-jet-proof (IP65) (Note 4)	
	Coil rated voltage	12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)	
	Allowable voltage fluctuation	±10% of rated voltage	
	Coil insulation type	Equivalent to Class B	
	Power consumption (Current)	24 VDC	0.4 W DC (17 mA), 0.95 W DC (40 mA) (Note 3)
		12 VDC	0.4 W DC (34 mA), 0.95 W DC (80 mA) (Note 3)
		100 VAC	Inrush 0.96 VA (10 mA), Holding 0.96 VA (10 mA)
		110 VAC	Inrush 1.0 VA (9 mA), Holding 1.0 VA (9 mA)
		200 VAC	Inrush 1.26 VA (6 mA), Holding 1.26 VA (6 mA)
		220 VAC	Inrush 1.38 VA (6 mA), Holding 1.38 VA (6 mA)

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance ----- No malfunction occurred when it was tested in the axial direction and at right angles to the main valve and armature in both energized and de-energized states once for each condition. (Default settings)

Vibration resistance ... No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed in both energized and de-energized states in the axial direction and at right angles to the main valve and armature. (Default settings)

Note 3) Value for high-speed response, high-voltage type (0.95 W)


Note 4) Dust-tight, Water-jet-proof (IP65) is available on T/L/S/M kit of the VQ2000.

Manifold Specifications


Series	Base model	Connection type	Piping specifications		Applicable stations	Applicable solenoid valve	5-station weight (g)
			Piping direction	Port size (Note 1)			
10-21-VQ1000	VV5Q11-□□□	F kit-D-sub connector P kit-Flat ribbon cable T kit-Terminal block box L kit-Lead wire S kit-Serial transmission	Side	1(P), 3(R)	4(A), 2(B)	VQ1□00 VQ1□01	643 (Single) 754 (Double, 3-position)
				C8 (ø8) Option: Direct EXH outlet with built-in silencer	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)		
10-21-VQ2000	VV5Q21-□□□	F kit-D-sub connector P kit-Flat ribbon cable T kit-Terminal block box L kit-Lead wire S kit-Serial transmission M kit-Circular connector	Side	C10 (ø10) Option: Direct EXH outlet with built-in silencer	C4 (ø4) C6 (ø6) C8 (ø8)	VQ2□00 VQ2□01	1076 (Single) 1119 (Double, 3-position)

Note 1) Inch-size One-touch fittings are also available. Refer to page 563 for details.

Note 2) Refer to page 562 for details.

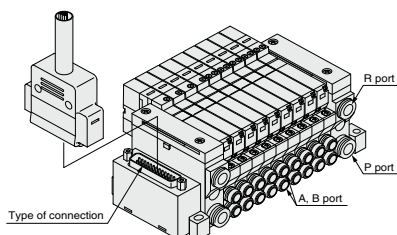


10-21-VV5Q11

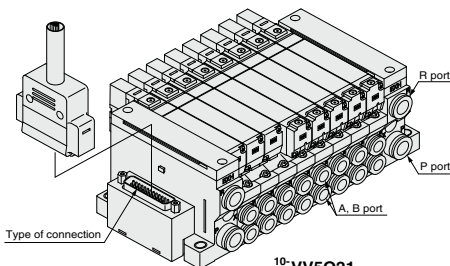

10-21-VV5Q21

F Series ¹⁰⁻²¹-VQ1000/2000 Kit (D-sub connector)

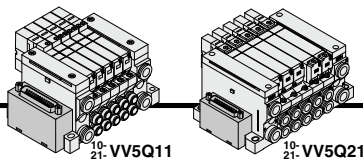

- D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as semi-standard) conforming to MIL standard permits the use of commercial connectors and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 24.

D-sub Connector (25 Pins)


Manifold Specifications

Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
10-21- VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations
10-21- VQ2000	Side	C10	C4, C6, C8	Max. 24 stations

Cable Assembly

AXT100-DS25-015
030
050

(The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold.")

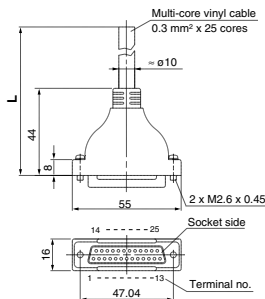

D-sub connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 0.3 mm ² x 25 cores
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

※ For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

※ Cannot be used for transfer wiring.

Example of connector manufacturers

- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The minimum bending radius of the D-sub connector cable is 20 mm.


Wire color by terminal no. of D-sub connector cable assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

Note 1) Types with 15 pins are also available. Refer to page 561 for details.

Note 2) Lengths other than the above are also available. Please contact SMC for details.

How to Order Manifold

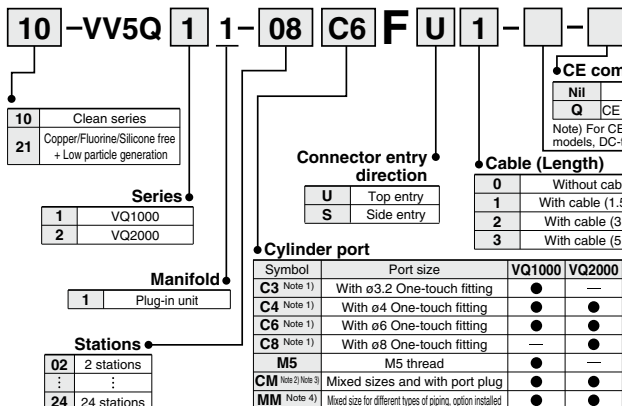

Note) For CE compliant models, DC-type only.



[Option]

Option

Symbol	Option
Nil	None
2	200/220 VAC models (F/L kit only)
B (Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D (Note 3)	DIN rail length specified (□: Stations 02 to 24)
K (Note 4)	Special wiring specifications (Except double wiring)
N	With name plate
R (Note 5)	External pilot


Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR

Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

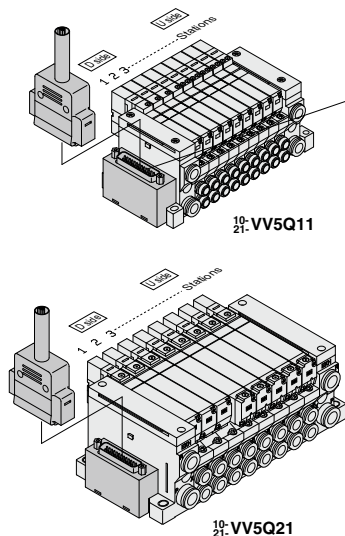

Electrical Wiring Specifications

D-sub connector



As the standard electrical wiring specifications, double wiring (connected to SOLA and SOLB) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.

Mixed single and double wiring is available as semi-standard. Refer to page 562 for details.

D-sub connector assembly 015 AXT100-DS25-030 Wire color 050



	Terminal no.	Polarity	Lead wire color	Dot marking
Station 1.	SOLA 14	(-) (+)	Black	None
	SOLA 2	(-) (+)	Yellow	Black
Station 2.	SOLA 15	(-) (+)	Brown	None
	SOLA 3	(-) (+)	Pink	Black
Station 3.	SOLA 16	(-) (+)	Blue	White
	SOLA 4	(-) (+)	Orange	None
Station 4.	SOLA 17	(-) (+)	Purple	None
	SOLA 5	(-) (+)	Yellow	None
Station 5.	SOLA 18	(-) (+)	Gray	None
	SOLA 6	(-) (+)	Pink	Black
Station 6.	SOLA 19	(-) (+)	Orange	None
	SOLA 7	(-) (+)	Blue	None
Station 7.	SOLA 20	(-) (+)	Red	White
	SOLA 8	(-) (+)	Purple	White
Station 8.	SOLA 21	(-) (+)	Brown	White
	SOLA 9	(-) (+)	Pink	Black
Station 9.	SOLA 22	(-) (+)	Gray	Red
	SOLA 10	(-) (+)	White	Black
Station 10.	SOLA 23	(-) (+)	Gray	Red
	SOLA 11	(-) (+)	White	Red
Station 11.	SOLA 24	(-) (+)	Black	White
	SOLA 12	(-) (+)	Yellow	Red
Station 12.	SOLA 25	(-) (+)	White	None
	COM. 13	(-) (+)	Orange	Red
Positive COM spec.		Negative COM spec.		

F Series ¹⁰⁻²¹-VQ1000/2000 kit (D-sub connector)

10-21-VV5Q11

< >: AC

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

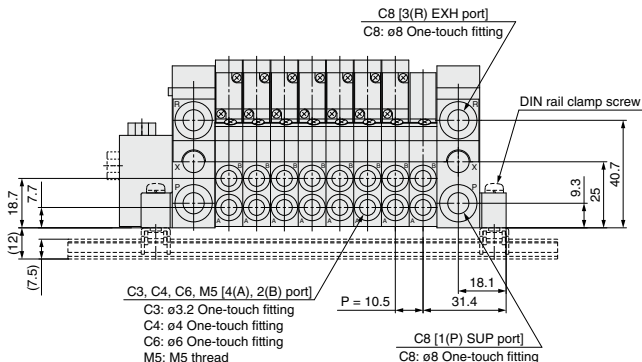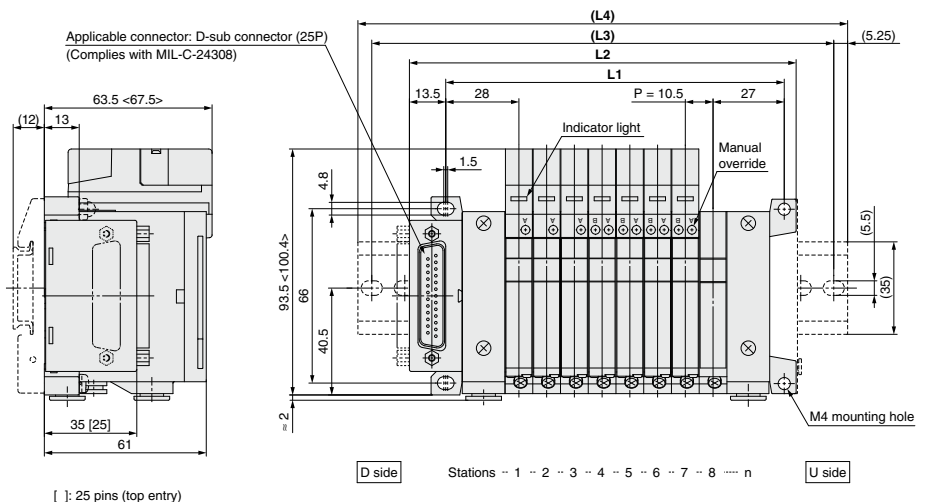

Dimensions

Formula L1 = 10.5n + 44.5, L2 = 10.5n + 62.5 n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2		83.5	94	104.5	115	125.5	136	146.5	157	167.5	178	188.5	199	209.5	220	230.5	241	251.5	262	272.5	283	293.5	304	314.5
(L3)		112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5
(L4)		123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348

With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)



L2 = 10.5n + 46.3 + (Number of ejector units x 26.7)

L4 is L2 plus about 30.

**10-
21-VV5Q21**

 $\leq \geq$: AC

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

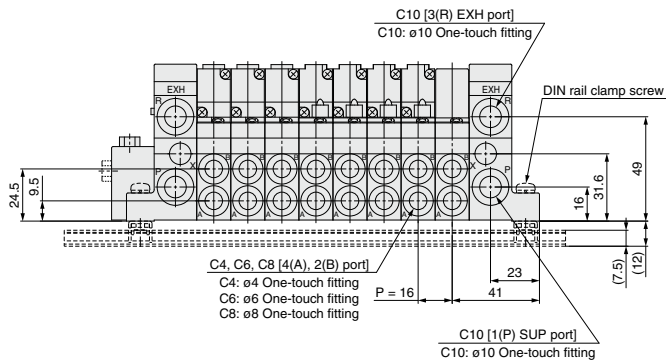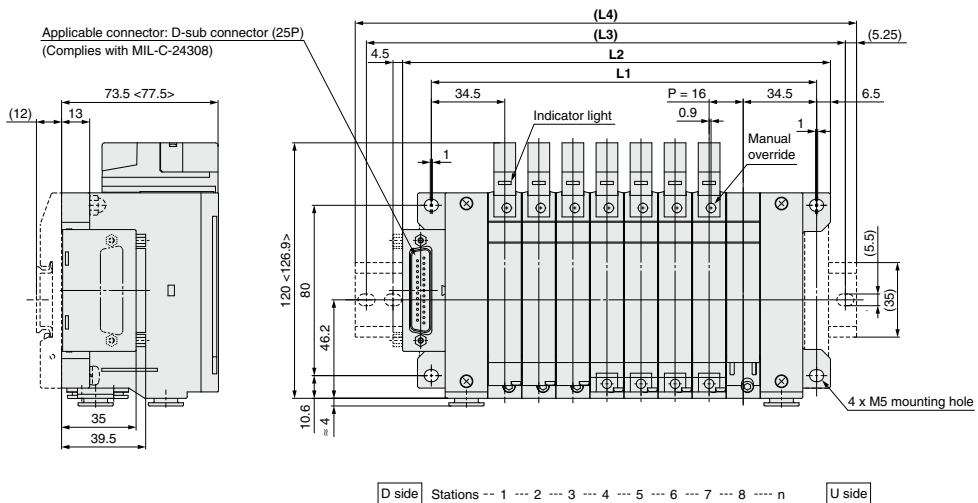


Dimensions

Formula L1 = 16n + 53, L2 = 16n + 73 n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437
L2		105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441	457
(L3)		137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5
(L4)		148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498

P Series¹⁰⁻²¹ VQ1000/2000 kit (Flat ribbon cable)

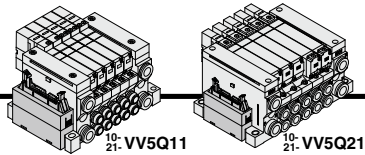


- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable (26P) conforming to MIL standard permits the use of commercial connectors and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 24.

Manifold Specifications

Series	Piping specifications		Applicable stations
	Piping direction	Port size	
10-21: VQ1000	Side	C8	C3, C4, C6, M5
10-21: VQ2000	Side	C10	C4, C6, C8

Flat Ribbon Cable (26 Pins)

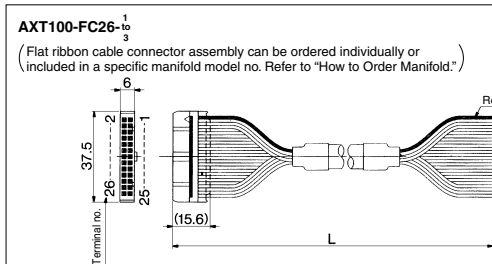

Flat Ribbon Cable Connector Assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	Cable 26 cores x 28AWG
3 m	AXT100-FC26-2	
5 m	AXT100-FC26-3	


- * For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.
- * Cannot be used for transfer wiring.

Connector manufacturers' example

- HIROSE ELECTRIC CO., LTD.
- Fujitsu Limited
- J.S.T. Mfg. Co., Ltd.
- 3M Japan Limited
- Japan Aviation Electronics Industry, Limited
- Oki Electric Cable Co., Ltd.

Note 1) Other than the above model, 10P, 16P, 20P are also available. Refer to page 561 for details.
Note 2) Lengths other than the above are also available. Please contact SMC for details.


Cable Assembly

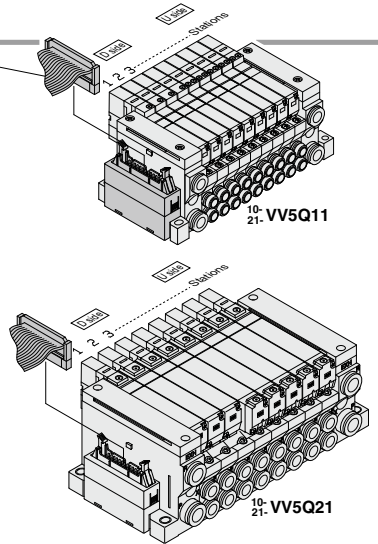

The total number of stations is tabulated starting from one on the D-side.

Note) For CE compliant models, DC-type only. [Option]

How to Order Manifold

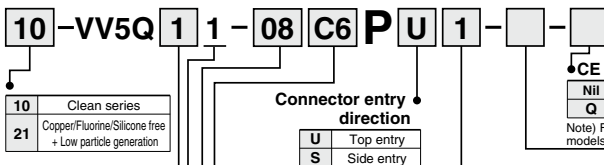

Option

Symbol	Option
Nil	None
B Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D [] Note 3)	DIN rail length specified (□: Stations 02 to 24)
K Note 4)	Special wiring specifications (Except double wiring)
N	With name plate
R Note 5)	External pilot

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR
- Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
- Note 3) The number of stations that may be displayed is longer than the manifold number of stations.
- Note 4) Specify the wiring specifications by means of the manifold specification sheet.
- Note 5) Indicate "R" for the valve with external pilot.

Electrical Wiring Specifications

Flat ribbon cable connector

Connector terminal no. Triangle mark indicator position

Station	Terminal no.	Polarity
Station 1	SOL.A 1	(-)
	SOL.B 2	(+)
Station 2	SOL.A 3	(-)
	SOL.B 4	(+)
Station 3	SOL.A 5	(-)
	SOL.B 6	(+)
Station 4	SOL.A 7	(-)
	SOL.B 8	(+)
Station 5	SOL.A 9	(-)
	SOL.B 10	(+)
Station 6	SOL.A 11	(-)
	SOL.B 12	(+)
Station 7	SOL.A 13	(-)
	SOL.B 14	(+)
Station 8	SOL.A 15	(-)
	SOL.B 16	(+)
Station 9	SOL.A 17	(-)
	SOL.B 18	(+)
Station 10	SOL.A 19	(-)
	SOL.B 20	(+)
Station 11	SOL.A 21	(-)
	SOL.B 22	(+)
Station 12	SOL.A 23	(-)
	SOL.B 24	(+)
	COM 25	(+)
	COM 26	(-)

Electrical wiring specifications

Positive COM spec. Negative COM spec.

As the standard electrical wiring specifications, double wiring (connected to SOL.A and SOL.B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.

Mixed single and double wiring is available as semi-standard. Refer to page 562 for details.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 562.) Refer to "Semi-standard" on page 562 for details.

How to Order Valve

Note) For CE compliant models, DC-type only. **CE** [Option]

10-VQ 1 1 0 0 - 5 1 -

Series

1	VQ1000
2	VQ2000

10 Clean series

21 Copper/Fluorine/Silicone free + Low particle generation

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ (Note 1)
B	High-speed response type	(0.95 W) ○	—
K (Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N (Note 3)	Negative common	○	—
R (Note 3)	External pilot	○	○

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/surge voltage suppressor

Nil	Yes
E	None

Coil voltage

	DC type	CE compliant
1	100 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●


Note 1) Refer to page 522 for power consumption of AC type.
Note 2) Metal seal only.
Note 3) Refer to "Semi-standard" on pages 562 to 563 for external pilot and negative common specifications.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Flat ribbon cable kit with cable (3 m)
10-V5Q11-09C6PU2-1 set-Manifold base part no.
*10-VQ1100-51 2 sets-Valve part no. (Stations 1 to 2)
*10-VQ1200-51 4 sets-Valve part no. (Stations 3 to 6)
*10-VQ1300-51 2 sets-Valve part no. (Stations 7 to 8)
*VQ1000-10A-1 1 set-Blanking plate part no. (Station 9)

Write sequentially from the 1st station on the D-side. When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

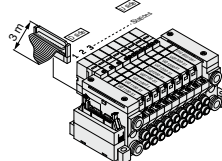

Caution
Use the standard (DC) specification when continuously energizing for long periods of time.


P *Series 10-21-VQ1000/2000*
kit (Flat ribbon cable)

**10-
21-VV5Q11**

 $\leq \geq$: AC

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].


Applicable connector: Flat ribbon cable connector (26P)
(Complies with MIL-C-83503)

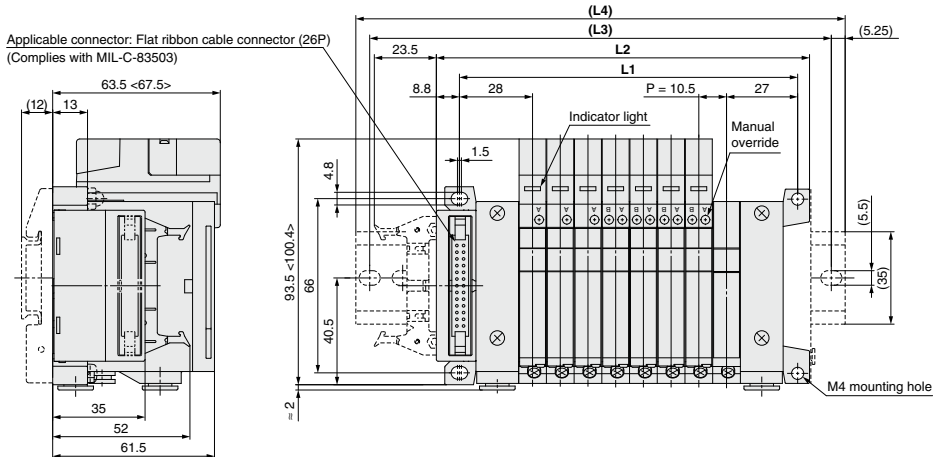

D side

Stations -- 1 -- 2 -- 3 -- 4 -- 5 -- 6 -- 7 -- 8 n

U side

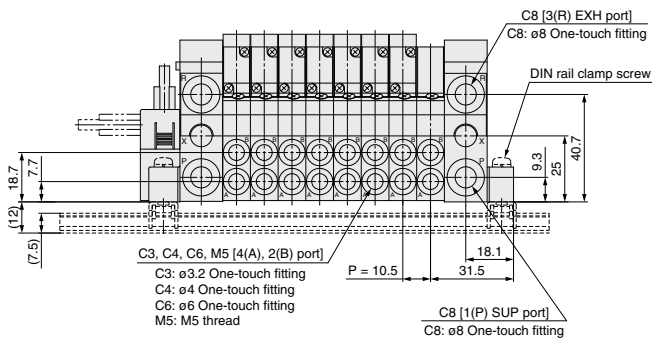

Dimensions

Formula L1 = 10.5n + 44.5, L2 = 10.5n + 57.5 n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2		78.5	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	236	246.5	257	267.5	278	288.5	299	309.5
(L3)		112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5
(L4)		123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348

With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)



$$L2 = 10.5n + 41.3 + (\text{Number of ejector units} \times 26.7)$$

L4 is L2 plus about 30.

10-21-VV5Q21

< >: AC

The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].

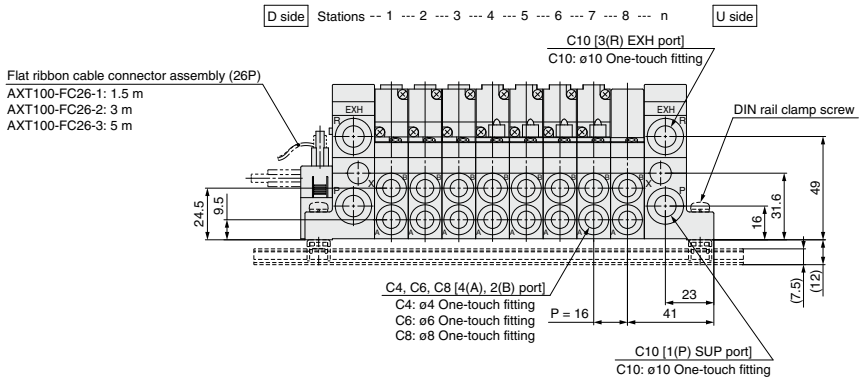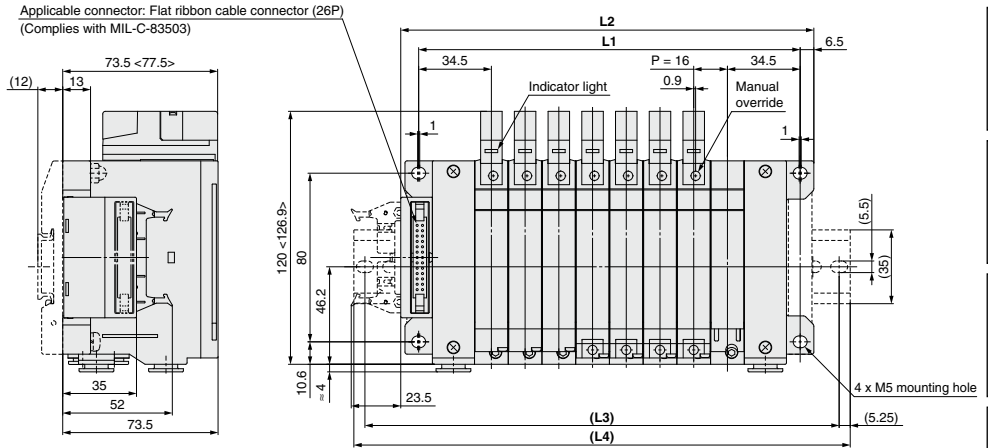

Dimensions

Formula L1 = 16n + 53, L2 = 16n + 68 n: Station (Maximum 24 stations)



L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437	
L2	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340	356	372	388	404	420	436	452	
(L3)	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	312.5	337.5	350	362.5	387.5	400	412.5	425	450	462.5	475	
(L4)	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	



Series 10-21-VQ1000/2000 kit (Flat ribbon cable with terminal block)

10-21-VV5Q11

The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

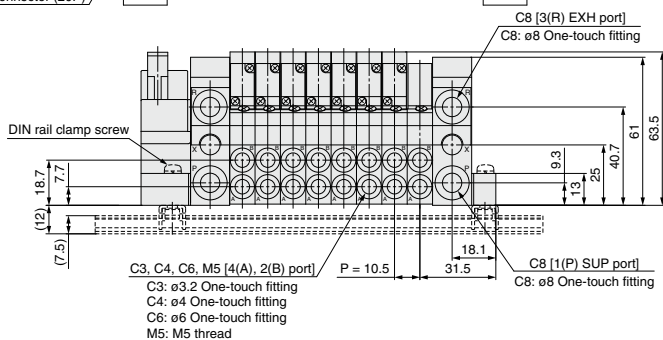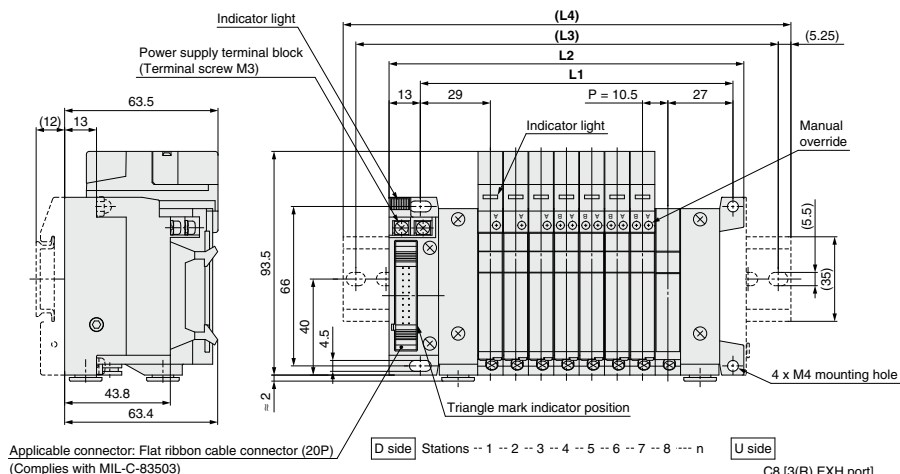

Dimensions


Formula $L1 = 10.5n + 45.5$, $L2 = 10.5n + 63$ n: Station (Maximum 16 stations)

n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5
L2	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273


With ejector unit: Formula $L1 = 10.5n + 29.7 + (\text{Number of ejector units} \times 26.7)$
 $L2 = 10.5n + 46.8 + (\text{Number of ejector units} \times 26.7)$
 L4 is L2 plus about 30.

10-21-VV5Q21

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

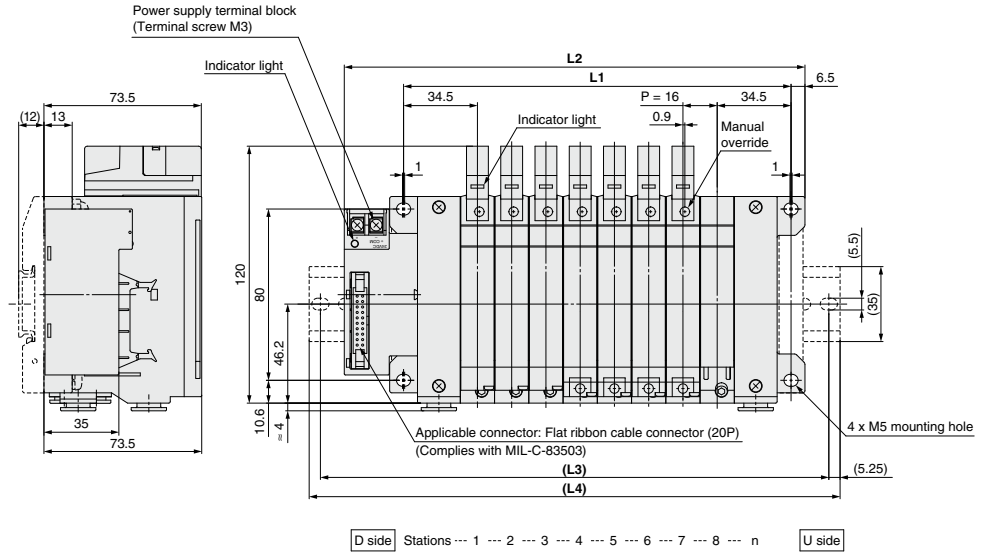

Flat ribbon cable connector assembly (20P)
 AXT100-FC20-1: 1.5 m
 AXT100-FC20-2: 3 m
 AXT100-FC20-3: 5 m

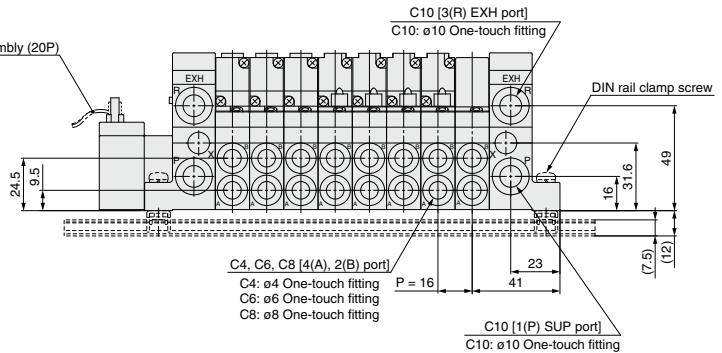

Dimensions

Formula L1 = 16n + 53, L2 = 16n + 87 n: Station (Maximum 16 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	
L2	119	135	151	167	183	199	215	231	247	263	279	295	311	327	343	
(L3)	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	362.5	
(L4)	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	

T Series¹⁰⁻²¹ VQ1000/2000 kit (Terminal block box)

IP65 compliant

- This kit has a small terminal block inside a junction box. The electrical entry port (10-21: VQ1000: G 1/2, 21: VQ2000: G 3/4) permits connection of conduit fittings.
- Maximum stations: 24 (10-21: VQ1000), 20 (10-21: VQ2000)
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)

Manifold Specifications


Series	Piping specifications		Applicable stations
	Piping direction	Port size	
10-21: VQ1000	Side	C8	C3, C4, C6, M5
10-21: VQ2000	Side	C10	C4, C6, C8

Terminal Block Connection (10-21: VQ1000)

Open the terminal block cover to connect the wires to the terminal block.

Step 1. Removing the terminal block cover

 Loosen the screws on the terminal block cover and open it in the direction shown by the arrow. The cover can then be removed from the terminal block.






Step 2. Wiring

The diagram on the left shows the terminal block wiring schematic. All stations are provided with double solenoid wiring. Insert each lead wire into the terminal opening and tighten the screw directly above.

How to connect is inserting the lead wire into the terminal window, then tighten the screw on the top. (Tightening torque: 0.25 to 0.35 N·m)

Step 3. Mounting the terminal block cover

Hook groove (a) on shaft (b) and close the cover. Then tighten the screws.
• Drip proof plug assembly (for G 1/2): AXT100-B04A

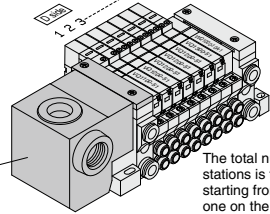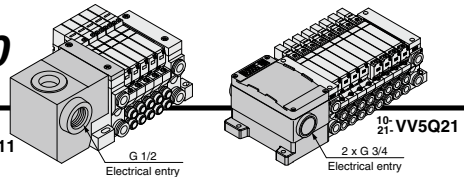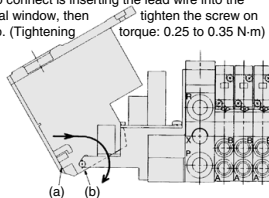

The total number of stations is tabulated starting from station one on the D-side.

Electrical Wiring Specifications: 10-21: VQ1000

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000	1001	1002	1003	1004	1005	1006	1007	1008	1009	1010	1011	1012	1013	1014	1015	1016	1017	1018	1019	1020	1021	1022	1023	1024	1025	1026	1027	1028	1029	1030	1031	1032	1033	1034	1035	1036	1037	1038	1039	1040	1041	1042	1043	1044	1045	1046	1047	1048	1049	1050	1051	1052	1053	1054	1055	1056	1057	1058	1059	1060	1061	1062	1063	1064	1065	1066	1067	1068	1069	1070	1071	1072	1073	1074	1075	1076	1077	1078	1079	1080	1081	1082	1083	1084	1085	1086	1087	1088	1089	1090	1091	1092	1093	1094	1095	1096	1097	1098	1099	1100	1101	1102	1103	1104	1105	1106	1107	1108	1109	1110	1111	1112	1113	1114	1115	1116	1117	1118	1119	1120	1121	1122	1123	1124	1125	1126	1127	1128	1129	1130	1131	1132	1133	1134	1135	1136	1137	1138	1139	1140	1141	1142	1143	1144	1145	1146	1147	1148	1149	1150	1151	1152	1153	1154	1155	1156	1157	1158	1159	1160	1161	1162	1163	1164	1165	1166	1167	1168	1169	1170	1171	1172	1173	1174	1175	1176	1177	1178	1179	1180	1181	1182	1183	1184	1185	1186	1187	1188	1189	1190	1191	1192	1193	1194	1195	1196	1197	1198	1199	1200	1201	1202	1203	1204	1205	1206	1207	1208	1209	1210	1211	1212	1213	1214	1215	1216	1217	1218	1219	1220	1221	1222	1223	1224	1225	1226	1227	1228	1229	1230	1231	1232	1233	1234	1235	1236	1237	1238	1239	1240	1241	1242	1243	1244	1245	1246	1247	1248	1249	1250	1251	1252	1253	1254	1255	1256	1257	1258	1259	1260	1261	1262	1263	1264	1265	1266	1267	1268	1269	1270	1271	1272	1273	1274	1275	1276	1277	1278	1279	1280	1281	1282	1283	1284	1285	1286	1287	1288	1289	1290	1291	1292	1293	1294	1295	1296	1297	1298	1299	1300	1301	1302	1303	1304	1305	1306	1307	1308	1309	1310	1311	1312	1313	1314	1315	1316	1317	1318	1319	1320	1321	1322	1323	1324	1325	1326	1327	1328	1329	1330	1331	1332	1333	1334	1335	1336	1337	1338	1339	1340	1341	1342	1343	1344	1345	1346	1347	1348	1349	1350	1351	1352	1353	1354	1355	1356	1357	1358	1359	1360	1361	1362	1363	1364	1365	1366	1367	1368	1369	1370	1371	1372	1373	1374	1375	1376	1377	1378	1379	1380	1381	1382	1383	1384	1385	1386	1387	1388	1389	1390	1391	1392	1393	1394	1395	1396	1397	1398	1399	1400	1401	1402	1403	1404	1405	1406	1407	1408	1409	1410	1411	1412	1413	1414	1415	1416	1417	1418	1419	1420	1421	1422	1423	1424	1425	1426	1427	1428	1429	1430	1431	1432	1433	1434	1435	1436	1437	1438	1439	1440	1441	1442	1443	1444	1445	1446	1447	1448	1449	1450	1451	1452	1453	1454	1455	1456	1457	1458	1459	1460	1461	1462	1463	1464	1465	1466	1467	1468	1469	1470	1471	1472	1473	1474	1475	1476	1477	1478	1479	1480	1481	1482	1483	1484	1485	1486	1487	1488	1489	1490	1491	1492	1493	1494	1495	1496	1497	1498
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------

Terminal Block Wiring (10-21-VQ2000)

Open the terminal block cover to connect the wires to the terminal block.


Step 1. Removing the terminal block cover

Loosen mounting screws (4 pcs.) on the terminal block cover and remove the cover.

Step 2. Wiring

Loosen screws on the terminal block, connect wiring and complete it by tightening screws. (Tightening torque: 0.5 to 0.7 N·m)


The diagram on the right shows the terminal block wiring. All stations are provided with double wiring regardless of the valves which are mounted.

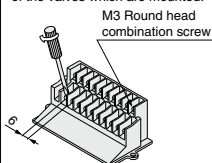


- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip proof assembly (for G 3/4): AXT100-B06A

Step 3. Mounting the terminal block cover

Securely tighten the screws after confirming that the gasket is installed correctly. (Tightening torque: 0.7 to 1.2 N·m)

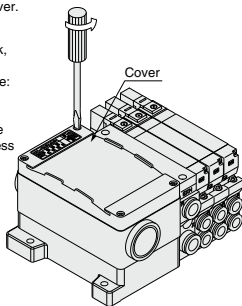

Special Wiring Specifications: 10-21-VQ2000

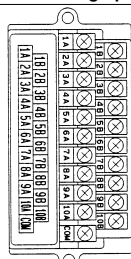

As the standard electrical wiring specifications, double wiring (connected to SOL A and SOL B) is adopted for the internal wiring of each station for 10 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 562 for details.

Note) When using the negative common specifications, use valves for negative common.

Refer to "Semi-standard" on page 562 for details.

	Terminal no.	Polarity
Station 1	SOL A 1A	(-) (+)
	SOL B 1B	(-) (+)
Station 2	SOL A 2A	(-) (+)
	SOL B 2B	(-) (+)
Station 3	SOL A 3A	(-) (+)
	SOL B 3B	(-) (+)
Station 4	SOL A 4A	(-) (+)
	SOL B 4B	(-) (+)
Station 5	SOL A 5A	(-) (+)
	SOL B 5B	(-) (+)
Station 6	SOL A 6A	(-) (+)
	SOL B 6B	(-) (+)
Station 7	SOL A 7A	(-) (+)
	SOL B 7B	(-) (+)
Station 8	SOL A 8A	(-) (+)
	SOL B 8B	(-) (+)
Station 9	SOL A 9A	(-) (+)
	SOL B 9B	(-) (+)
Station 10	SOL A 10A	(-) (+)
	SOL B 10B	(-) (+)
	COM.	(+) (-)

Note)
Positive COM spec.
Negative COM spec.

How to Order Valve

Note) For CE compliant models, DC-type only.

CE [Option]

10-VQ 1 1 0 0 - 5 - 1 -

Series

1	VQ1000
2	VQ2000

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

Seal

0	Metal seal
1	Rubber seal

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Enclosure

Nil	Dust-protected
W Note)	Dust-tight, Water-jet-proof (IP65)

Note) VQ2000 only

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/surge voltage suppressor

Nil	Yes
E	None

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W)	○ Note 1)
B	High-speed response type	(0.95 W)	○
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W)	○
N Note 3)	Negative common	○	—
R Note 3)	External pilot	○	○

Coil voltage

	CE compliant
1	100 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note 1) Refer to page 522 for power consumption of AC type.

Note 2) Metal seal only

Note 3) Refer to "Semi-standard" on pages 562 to 563 for external pilot and negative common specifications.

Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Terminal block box kit

10-VVQ11-08C6T0-1 set-Manifold base part no.
 *10-VQ1100-51 ... 2 sets-Valve part no. (Stations 1 to 2)
 *10-VQ1200-51 ... 4 sets-Valve part no. (Stations 3 to 6)
 *10-VQ1300-51 ... 1 set-Valve part no. (Station 7)
 *VVQ1000-10A-1 ... 1 set-Blanking plate part no. (Station 8)

Prefix the asterisk to the part no. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

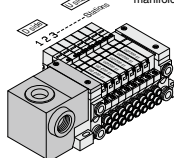

Directional Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment

Fittings & Tubing

Flow Control Equipment

Pressure Switches/Pressure Sensors




Series¹⁰⁻²¹ VQ1000/2000 kit (Terminal block box)

10-21-VV5Q11

< >: AC

The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

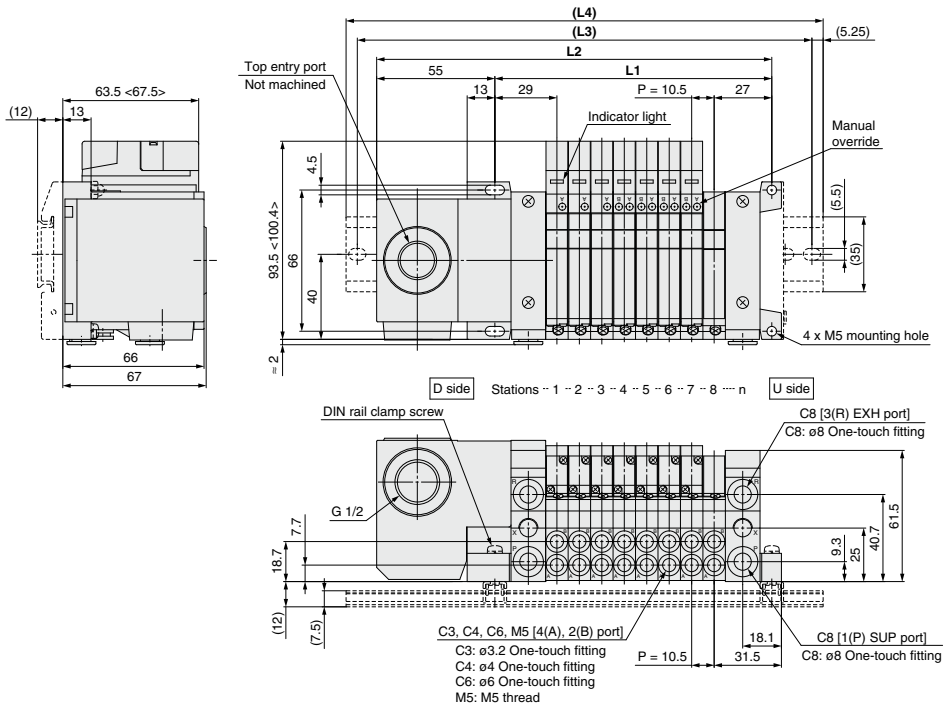

Dimensions

Formula L1 = 10.5n + 45.5, L2 = 10.5n + 105 n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5	224	234.5	245	255.5	266	276.5	287	297.5
L2		126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294	304.5	315	325.5	336	346.5	357
(L3)		150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5
(L4)		160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398

With ejector unit: Formula L1 = 10.5n + 29.7 + (Number of ejector units x 26.7)


L2 = 10.5n + 88.8 + (Number of ejector units x 26.7)

L4 is L2 plus about 30.


**10-
21-VV5Q21**

< >: AC


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

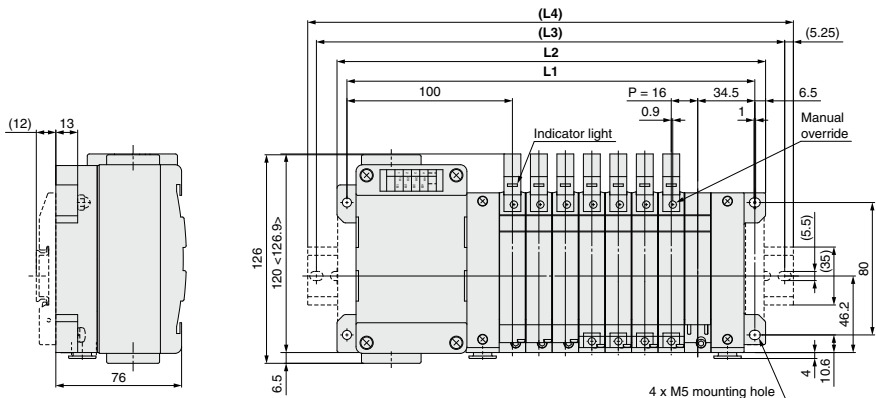

D side Stations -- 1 -- 2 -- 3 -- 4 -- 5 -- 6 -- 7 -- 8 -- n U side

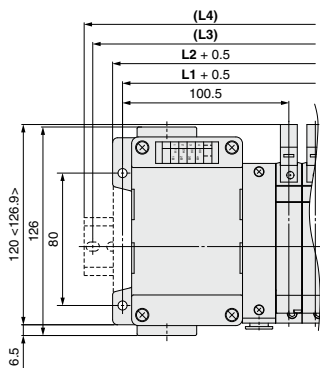

Dust-tight, Water-jet-proof

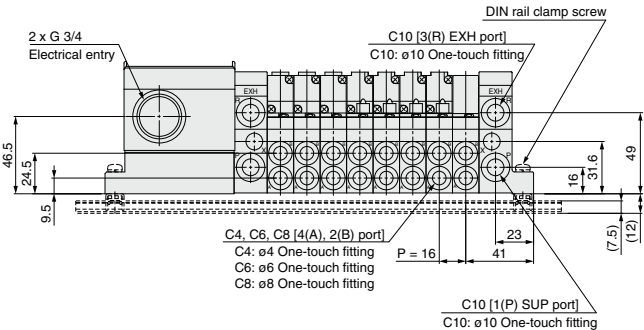

Dimensions

Formula L1 = $16n + 118.5$, L2 = $16n + 131$ n: Station (Maximum 20 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	150.5	166.5	182.5	198.5	214.5	230.5	246.5	262.5	278.5	294.5	310.5	326.5	342.5	358.5	374.5	390.5	406.5	422.5	438.5
L2	163	179	195	211	227	243	259	275	291	307	323	339	355	371	387	403	419	435	451
(L3)	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375	400	412.5	425	450	462.5	475
(L4)	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5


L Series ¹⁰⁻²¹-VQ1000/2000 kit (Lead wire)

IP65 compliant

- Direct electrical entry. Models with one or more stations are available.
- SUP and EXH ports are provided on one side for further space savings.
- Maximum stations are 8.
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (¹⁰⁻²¹-Series VQ2000)

Wiring Specifications: Positive COM ●

Three lead wires are attached to each station regardless of the type of valve which is mounted.
The red wire is for COM connection.

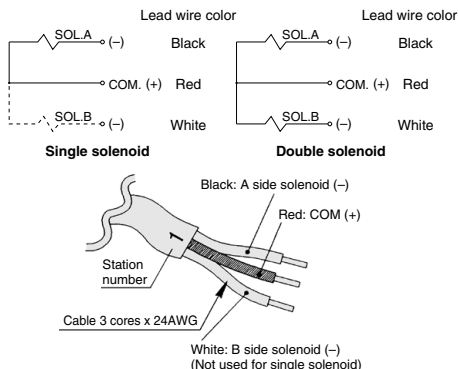


Use any of the below cable lead wire assembly to change the lead wire length:

Lead wire assembly with connector


Lead wire length	Part no.
0.6 m	VVQ1000-84A-6-*
1.5 m	VVQ1000-84A-15-*
3 m	VVQ1000-84A-30-*

* Station number 1 to 8

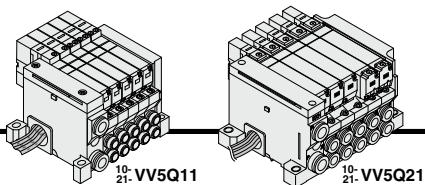

Manifold Specifications


Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
10-21-VQ1000	Side	C8	C3, C4, C6, M5	Max. 8 stations
10-21-VQ2000	Side	C10	C6, C8	Max. 8 stations

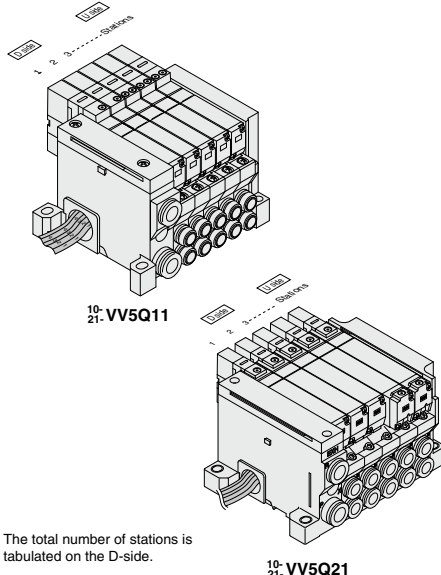

The total number of stations is tabulated on the D-side.

Note) For CE compliant models, DC-type only. [Option]

How to Order Manifold

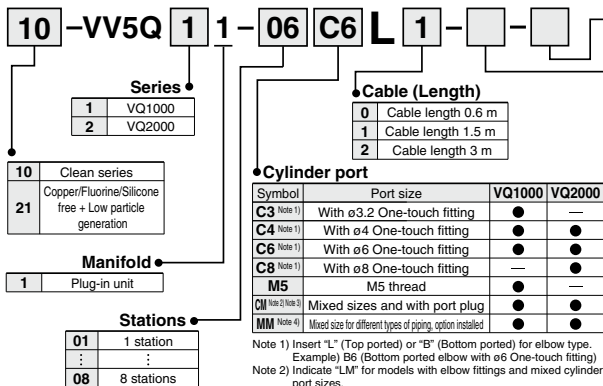

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Option

Symbol	Option	VQ1000	VQ2000
Nil	None	●	●
2	200/220 VAC models (F/L kit only)	●	●
B	With back pressure check valve	●	●
D	DIN rail mounting	●	●
D0	With DIN rail bracket (Without DIN rail)	●	●
D□	DIN rail length specified (□: Stations 02 to 08)	●	●
N	With name plate	●	●
R	External pilot	●	●
W	Enclosure: Dust-tight, Water-jet-proof (IP65)	—	●

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR

Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Indicate "R" for the valve with external pilot.


Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type. Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.



Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

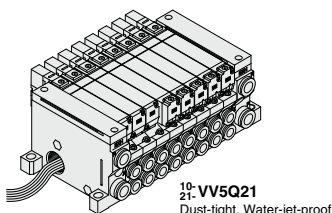

• Wiring Specifications: Negative COM (Semi-standard)

Three lead wires are attached to each station regardless of the type of valve which is mounted.
The black wire is for COM connection.

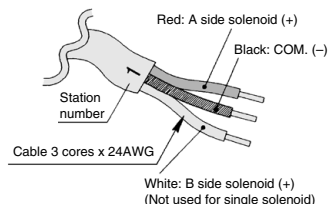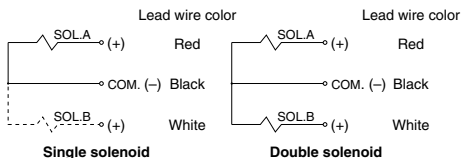

Lead wire assembly with connector

Lead wire length	Part no.
0.6 m	VVQ1000-84AN-6-*
1.5 m	VVQ1000-84AN-15-*
3 m	VVQ1000-84AN-30-*

* Station number 1 to 8

Note) When using the negative common specifications, use valves for negative common. For negative common specifications, refer to "Semi-standard" on page 562.

How to Order Valve

10-VQ 1 1 0 0 - 5 - - - 1 -

Series

1	VQ1000
2	VQ2000

Seal

0	Metal seal
1	Rubber seal

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

10 Clean series

21	Copper/Fluorine/Silicone free + Low particle generation
----	---

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W)	Note 1)
B	High-speed response type	(0.95 W)	
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W)	
N Note 3)	Negative common		
R Note 3)	External pilot		

Note 1) Refer to page 522 for power consumption of AC type.
Note 2) Metal seal only.
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Note) For CE compliant models, DC-type only.



CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Enclosure

Nil	Dust-protected
W Note)	Dust-tight, Water-jet-proof (IP65)

Note) VQ2000 only

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/surge voltage suppressor

Nil	Yes
E	None

Coil voltage

	CE compliant
1	100 VAC (50/60 Hz) —
2	200 VAC (50/60 Hz) —
3	110 VAC (50/60 Hz) —
4	220 VAC (50/60 Hz) —
5	24 VDC ●
6	12 VDC ●

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Lead wire kit with cable (3 m)
10-VV5Q11-06C6L2...1 set-Manifold base part no.
*10-VQ1100-51...2 sets-Valve part no. (Stations 1 to 2)
*10-VQ1200-51...2 sets-Valve part no. (Stations 3 to 4)
*10-VQ1300-51...2 sets-Valve part no. (Station 5)
*VVQ1000-10A-1...1 set-Blanking plate part no. (Station 6)

Prefix the asterisk to the part no. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

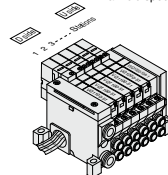

⚠ Caution


Use the standard (DC) specification when continuously energizing for long periods of time.

L Series ¹⁰⁻₂₁₋VQ1000/2000 kit (Lead wire)

10-
21-VV5Q11

< >: AC


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

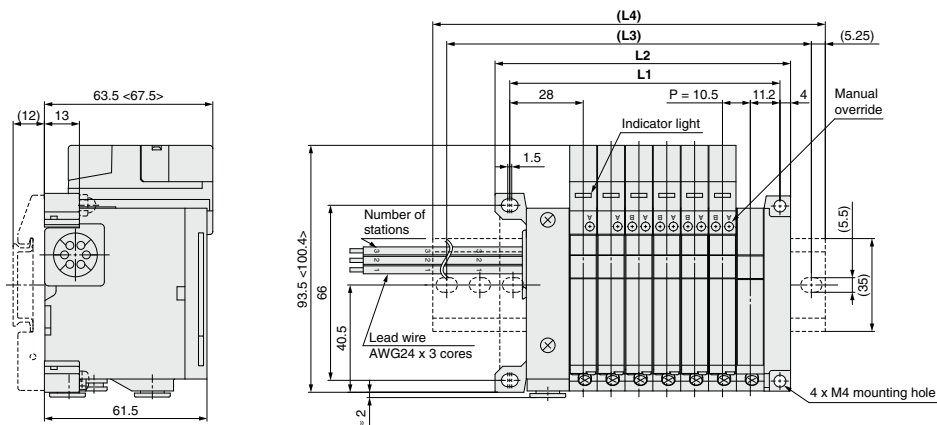

D side

Stations -- 1 -- 2 -- 3 -- 4 -- 5 -- 6 -- 7 -- n

U side

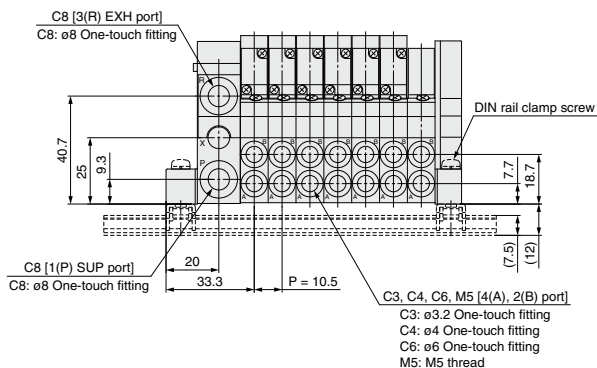

Dimensions

Formula L1 = 10.5n + 28.5, L2 = 10.5n + 38
 n: Station (Maximum 8 stations)

n	1	2	3	4	5	6	7	8
L1	39	49.5	60	70.5	81	91.5	102	112.5
L2	48.5	59	69.5	80	90.5	101	111.5	122
(L3)	75	87.5	87.5	100	112.5	125	137.5	150
(L4)	85.5	98	98	110.5	123	135.5	148	160.5

With ejector unit: Formula L1 = 10.5n + 28.5 + (Number of ejector units x 26.7)
 L2 = 10.5n + 38 + (Number of ejector units x 26.7)
 L4 is L2 plus about 30.

< >: AC

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).



Stations --- 1 --- 2 --- 3 --- 4 --- 5 --- 6 --- n



Dimensions


Formula L1 = 16n + 35, L2 = 16n + 47
n: Station (Maximum 8 stations)

L	n	1	2	3	4	5	6	7	8
L1	51	67	83	99	115	131	147	163	
L2	63	79	95	111	127	143	159	175	
(L3)	87.5	100	125	137.5	150	162.5	184.5	200	
(L4)	98	110.5	135.5	148	160.5	173	198	210.5	

S Series¹⁰⁻²¹ VQ1000/2000

kit (Serial transmission) Base mounted plug-in manifold: For EX510 Gateway-type serial transmission system

How to Order Manifold

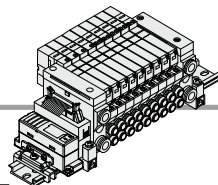

10 - **VV5Q** **1** **1** - **SB** **08** - **D** -

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Manifold series

1	VQ1000
2	VQ2000

SI unit specifications

NII	NPN output (+COM.)
N	PNP output (-COM.)

Valve stations

Symbol	Stations
01	1 station
08	8 stations

Note) Max. 16 stations.
(Special wiring specifications)

SI unit part no.

Symbol	SI unit specifications	SI unit part no.
NII	NPN output (+COM.)	EX510-S002A
N	PNP output (-COM.)	EX510-S102A

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3	With ø3.2 One-touch fitting	●	—
C4	With ø4 One-touch fitting	●	●
C6	With ø6 One-touch fitting	●	●
C8	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM Note 1)	With mixed sizes and with port plug	●	●
L3	Top ported elbow with ø3.2 One-touch fitting	●	—
L4	Top ported elbow with ø4 One-touch fitting	●	●
L6	Top ported elbow with ø6 One-touch fitting	●	●
L8	Top ported elbow with ø8 One-touch fitting	—	●
L5	Top ported elbow M5 thread	●	—
B3	Bottom ported elbow with ø3.2 One-touch fitting	●	—
B4	Bottom ported elbow with ø4 One-touch fitting	●	●
B6	Bottom ported elbow with ø6 One-touch fitting	●	●
B8	Bottom ported elbow with ø8 One-touch fitting	—	●
B5	Bottom ported elbow M5 thread	●	—
LM Note 1)	Elbow port, mixed sizes	●	●
N1	ø1/8" with One-touch fitting	●	—
N3	ø5/32" with One-touch fitting	●	●
N7	ø1/4" with One-touch fitting	●	●
N9	ø5/16" with One-touch fitting	—	●
M5T	UNF10-32 thread	●	—
NM Note 1)	With mixed sizes and with port plug	●	●
LN1	Top ported elbow with ø1/8" One-touch fitting	●	—
LN3	Top ported elbow with ø5/32" One-touch fitting	●	●
LN7	Top ported elbow with ø1/4" One-touch fitting	●	●
LN9	Top ported elbow with ø5/16" One-touch fitting	—	●
L5T	Top ported elbow UNF10-32 thread	●	—
BN1	Bottom ported elbow with ø1/8" One-touch fitting	●	—
BN3	Bottom ported elbow with ø5/32" One-touch fitting	●	●
BN7	Bottom ported elbow with ø1/4" One-touch fitting	●	●
BN9	Bottom ported elbow with ø5/16" One-touch fitting	—	●
B5T	Bottom ported elbow UNF10-32 thread	●	—
LM Note 1)	Elbow port, mixed sizes	●	●
MM Note 2)	Mixed size for different types of piping, option installed	●	●

Note 1) Indicate "Mixed sizes and with port plug" in the manifold specification sheet.
Note 2) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Refer to the **WEB catalog** for details on the EX510 gateway-type serial transmission system.

CE compliant

NII	—
Q	CE compliant

Option

NII	None
B Note 2)	With back pressure check valve
D Note 3)	DIN rail length specified (□: Stations 02 to 16)
K Note 3)	Special wiring spec. (Except double wiring)
N	With name plate
R Note 4)	with external pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNR

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) Specify the wiring specifications by means of the manifold specification sheet.


Note 4) Indicate "R" for the valve with external pilot.

Note 5) The number of stations that may be displayed is longer than the manifold number of stations.

DIN rail mounting

How to Order Manifold Assembly

Example

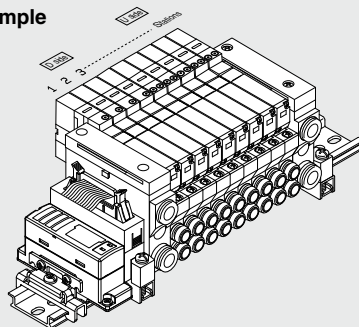

- 10-VV511-SB08C6-D-1 set (SB kit, 8-station manifold part no.)
- 10-VQ1100-S1 4 sets (Single type part no.)
- 10-VQ1200-S1 3 sets (Double type part no.)
- 10-VQ1300-S1 1 set (3 position type part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part no. of the solenoid valve, etc.

Enter in order starting from the first station on the D-side.

Add the valve and option part numbers under the manifold base part number. For complex arrangements, specify them by means of the manifold specification sheet.



Directional Control Valves

How to Order Valve

10-VQ1100-51

10 Clean series
21 Copper/Fluorine/Silicone free + Low particle generation

Series
1 VQ1000
2 VQ2000

Actuation type

1	2-position single	
2	Metal 2-position double	
	Rubber 2-position double	
3	3-position closed center	
4	3-position exhaust center	
5	3-position pressure center	

CE compliant
Nil —
Q CE compliant

Manual override
Nil: Non-locking push type (Tool required)
B: Locking type (Tool required)
C: Locking type (Manual)
D: Slide locking type (Manual)

Rated voltage
5 24 VDC

Function

Symbol	Specifications
Nil	Standard (0.4 W)
B	High-speed response type (0.95 W)
K Note 1)	High-pressure type (1.0 MPa) [0.95 W]
N Note 2)	Negative common
R Note 2)	External pilot

Note 1) Metal seal only
 Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
 Note 3) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Seal
0 Metal seal
1 Rubber seal

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment



Fittings & Tubing

Flow Control Equipment


Pressure Switches/Pressure Sensors

10-21-VV5Q11

Applicable connector: Flat ribbon cable connector (20P)
(Complies with MIL-C-83503)

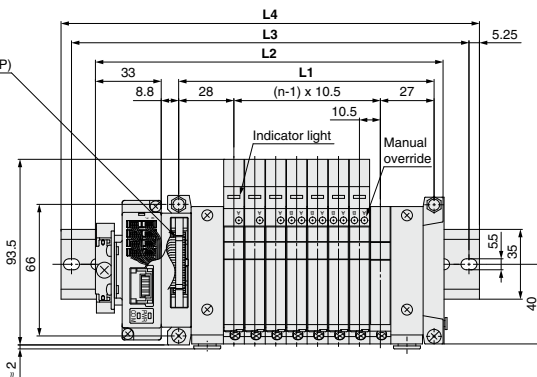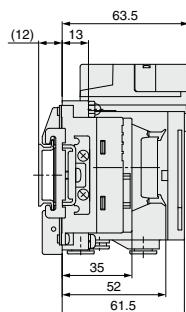

D side Stations ~ 1 ~ 2 ~ 3 ~ 4 ~ 5 ~ 6 ~ 7 ~ 8 ~ n U side

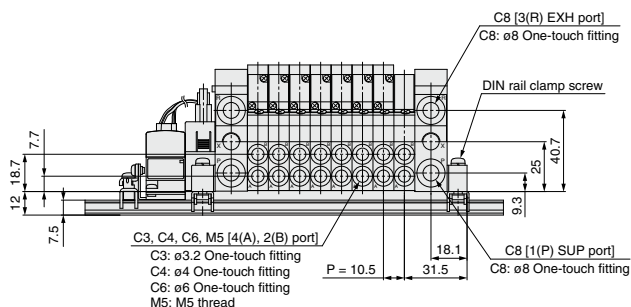



Dimensions

Formula $L1 = 10.5n + 44.5$, $L2 = 10.5n + 91$ n: Station (Maximum 16 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	55	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	101.5	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259
L3	125	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5
L4	135.5	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298

10-21-VV5Q21

Applicable connector: Flat ribbon cable connector (20P)
(Complies with MIL-C-83503)

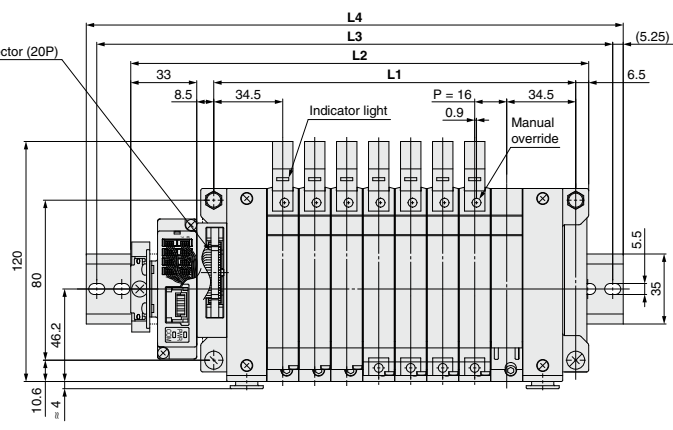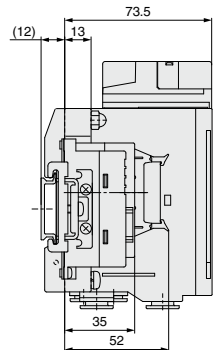

D side Stations -- 1 --- 2 --- 3 --- 4 --- 5 --- 6 --- 7 --- 8 --- n U side

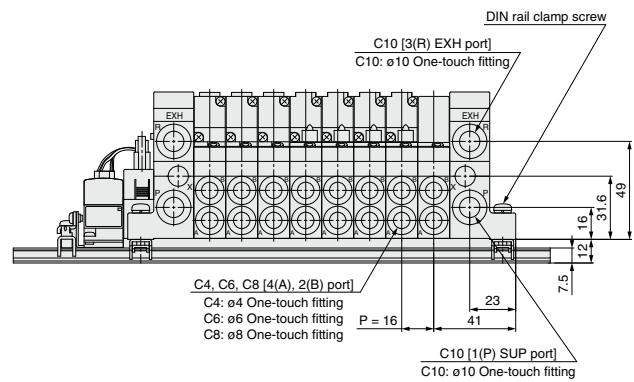

Dimensions

Formula $L1 = 16n + 53$, $L2 = 16n + 101$ n: Station (Maximum 16 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		69	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2		117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357
L3		137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	387.5
L4		148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	398

S Series¹⁰⁻²¹ VQ1000/2000

kit (Serial transmission): For EX120/124 Integrated-type (Output) serial transmission system

IP65 compliant

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (Series VQ2000)

Manifold Specifications

Series		Piping specifications			Applicable stations
		Piping direction	Port size		
			1(P), 3(R)	4(A), 2(B)	
10-21- VQ1000	Side	C8	C3, C4, C6, M5		Max. 16 stations
10-21- VQ2000	Side	C10	C4, C6, C8		Max. 16 stations

Note) Refer to "SI Unit Part No." when ordering the CE-compliant SI unit.



How to Order Manifold

10 - VV5Q 1 1 - 08 C6 S V - -

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Series

1	VQ1000
2	VQ2000

Manifold

1	Plug-in unit
---	--------------

Stations

02	2 stations
:	:
16 (Note)	16 stations

Note 1) Refer to page 562 for details.
Note 2) Max. 16 stations. (Specify a model with 9 to 16 stations by means of the manifold specification sheet.)

CE compliant

Nil	—
Q	CE compliant

Note) Refer to "SI Unit Part No." when ordering the CE-compliant SI unit.

SI unit specifications

Symbol	Protocol	Stations
0	Without SI unit	
H	NKE Corp.: Fieldbus H System	Max. 16 stations
Q	DeviceNet®	
R1	OMRON Corp.: CompoBus/S (16 outputs)	
R2	OMRON Corp.: CompoBus/S (8 outputs)	Max. 8 stations
V	CC-Link	
ZB	CompoNet® (Positive common)	Max. 16 stations
ZBN	CompoNet® (Negative common)	

Option

Symbol	Option	VQ1000	VQ2000
Nil	None	●	●
B (Note 2)	With back pressure check valve	●	●
D	DIN rail mounting	●	●
D (Note 3)	DIN rail mounting (□: Stations 02 to 16)	●	●
K (Note 4)	Special wiring specifications (Except double wiring)	●	●
N	With name plate	●	●
R (Note 5)	With external pilot	●	●
W	Enclosure: Dust-tight, Water-jet-proof (IP65)	—	●

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -BNR.

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.

Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 (Note 1)	With ø3.2 One-touch fitting	●	—
C4 (Note 1)	With ø4 One-touch fitting	●	●
C6 (Note 1)	With ø6 One-touch fitting	●	●
C8 (Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM (Note 2/Note 3)	Mixed sizes and with port plug	●	●
MM (Note 4)	Mixed size for different types of piping, option installed	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate as "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

SI Unit Part No.

(Without option W)


Symbol	Protocol	SI unit part no.	CE compliant
H	NKE Corp.: Fieldbus H System	EX120-SUH1	—
Q	DeviceNet®	EX120-SDN1	●
R1	OMRON Corp.: CompoBus/S (16 outputs)	EX120-SCS1	●
R2	OMRON Corp.: CompoBus/S (8 outputs)	EX120-SCS2	●
V	CC-Link	EX120-SMJ1	●
ZB	CompoNet® (Positive common)	EX120-SCM1	●
ZBN	CompoNet® (Negative common)	EX120-SCM3	●

SI Unit Part No. (With option W)


Symbol	Protocol	SI unit part no.	CE compliant
H	NKE Corp.: Fieldbus H System	EX123D-SUH1	—
Q	DeviceNet®	EX124D-SDN1	●
R1	OMRON Corp.: CompoBus/S (16 outputs)	EX124D-SCS1	●
R2	OMRON Corp.: CompoBus/S (8 outputs)	EX124D-SCS2	●
V	CC-Link	EX124D-SMJ1	●

Refer to the **WEB catalog** for details on the EX120/124 integrated-type (Output) serial transmission system.


* Refer to the **WEB catalog** for details on CompoNet®.

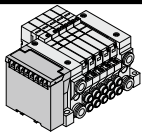

10-21-VV5Q11

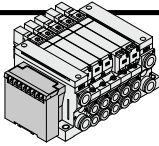

10-21-VV5Q21

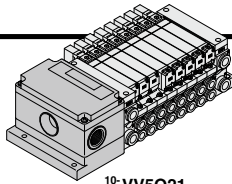10-21-VV5Q21
Dust-tight, Water-jet-proof (-W)

[Option]

How to Order Valve

10-VQ1100-51-1

Series

1	VQ1000
2	VQ2000

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

Seal

0	Metal seal
1	Rubber seal

CE compliant

Nil	—
Q	CE compliant

Enclosure

Nil	Dust-protected
W (Note)	Dust-tight, Water-jet-proof (IP65)

(Note) ≧ VQ2000 only

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Coil voltage

5	24 VDC With indicator light/ surge voltage suppressor
---	---

Function

Symbol	Specifications	DC
Nil	Standard	(0.4 W) ○
B	High-speed response type	(0.95 W) ○
K (Note 1)	High-pressure type (1.0 MPa)	(0.95 W) ○
N (Note 2)	Negative common	○
R (Note 2)	External pilot	○

Note 1) Metal seal only

Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.

Note 3) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

10-VV5Q11-08C6SV-1 set-Manifold base part no.
 *10-VQ1100-51 ... 2 sets-Valve part no. (Stations 1 to 2)
 *10-VQ1200-51 ... 4 sets-Valve part no. (Stations 3 to 6)
 *10-VQ1300-51 ... 1 set-Valve part no. (Station 7)
 *VVQ1000-10A-1 ... 1 set-Blanking plate part no. (Station 8)

Prefix the asterisk to the part no. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side.
 When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

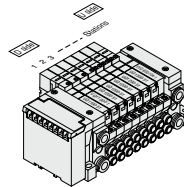

Directional Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment

Fittings & Tubing


Flow Control Equipment

Pressure Switches/Pressure Sensors



S Series ¹⁰⁻₂₁₋VQ1000/2000

kit (Serial transmission): For EX120 Integrated-type (Output) serial transmission system

10-
21-VV5Q11

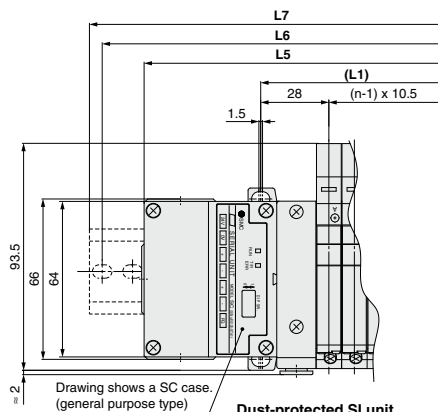

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

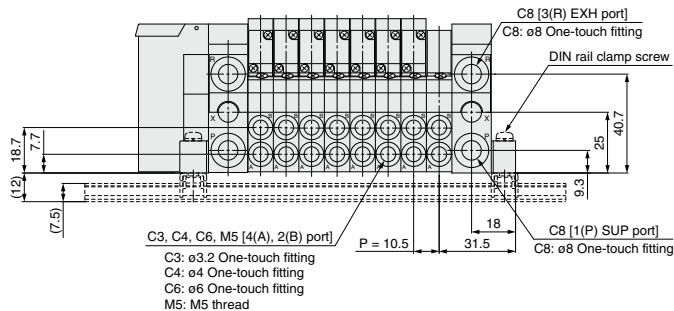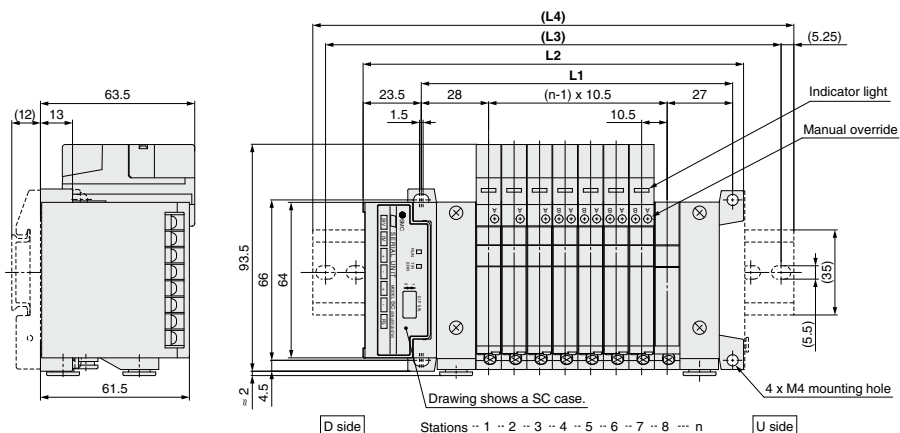


Dimensions

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2		93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5
(L3)		125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
(L4)		135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273



Dust-protected SI unit: L5 = 10.5n + 97, L6 = L3 + 25, L7 = L4 + 25
Formula L1 = 10.5n + 44.5, L2 = 10.5n + 72.5 n: Station (Maximum 16 stations)

10-21-VV5Q21

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

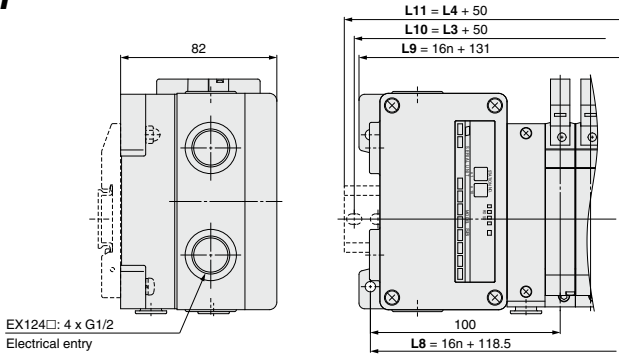

Dust-tight, Water-jet-proof (IP65) SI unit
(EX124 integrated-type (output) serial transmission system)

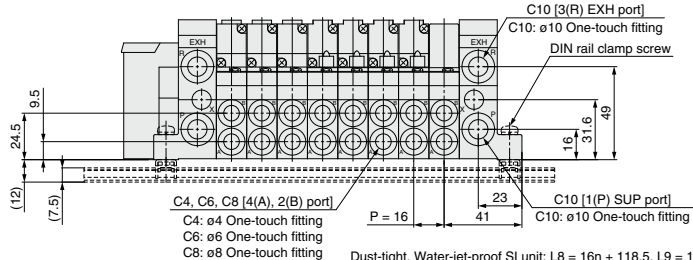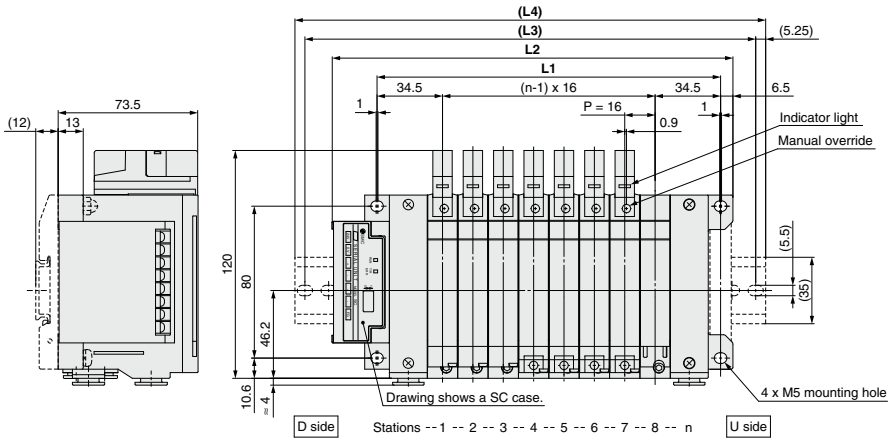

Dust-tight, Water-jet-proof SI unit: $L8 = 16n + 118.5$, $L9 = 16n + 131$

$L10 = L3 + 50$, $L11 = L4 + 50$


Formula $L1 = 16n + 53$, $L2 = 16n + 83$ n: Station (Maximum 16 stations)

Dimensions

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2		115	131	147	163	179	195	211	227	243	259	275	291	307	323	339
(L3)		137.5	162.5	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
(L4)		148	173	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373

M

Series¹⁰⁻²¹ VQ2000 kit (Circular connector)

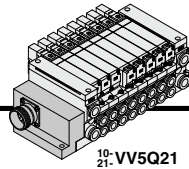

VQ2000 only

10-21-VV5Q21

- MIL flat cable connector reduces installation labor for electrical connection.
- Manifold and connectors, both compliant with the IP65 rating (Dust-tight, Water-jet-proof), provide a high-degree of protection for the electrical parts.
- Maximum stations are 24.

Manifold Specifications


Series	Piping specifications		Applicable stations
	Piping direction	Port size	
		1(P), 3(R), 4(A), 2(B)	
10-21: VQ2000	Side	C10	C4, C6, M8
			Max. 24 stations

Circular Connector (26 Pins)

Cable Assembly ●

AXT100-MC26-015
030
050

(Circular connector cable assembly included in a specific manifold model no.)
(Refer to "How to Order Manifold.")

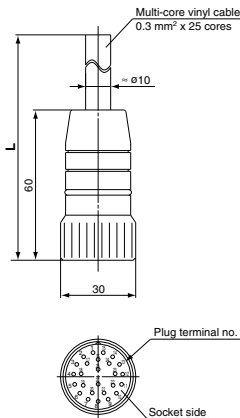

Circular connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-MC26-015	Cable 25-core x 24AWG
3 m	AXT100-MC26-030	
5 m	AXT100-MC26-050	

* Cannot be used for transfer wiring.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C or more	5

Note) The minimum bending radius of the circular connector cable is 20 mm.

Circular connector cable assembly terminal no.

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None
26	White	None

Note) Lengths other than the above are also available. Please contact SMC for details.

Note) For CE compliant models, DC-type only.

CE [Option]

How to Order Manifold

10 - VV5Q 2 1 - 08 C6 M 1 - N -

10	Clean series
21	Copper/Fluorine/Silicone free + Low particle generation

Series
2 VQ2000

Manifold
1 Plug-in unit

02	2 stations
24	24 stations

Note) Refer to page 562 for details.

Cylinder port

Symbol	Port size
C4 (Note 1)	With ø4 One-touch fitting
C6 (Note 1)	With ø6 One-touch fitting
C8 (Note 1)	With ø8 One-touch fitting
CM (Note 2) Note 3	Mixed sizes and with port plug
MM (Note 4)	Mixed size for different types of piping, option installed

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 One-touch fitting)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.

Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions on the manifold specification sheet.

Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 563 for details.

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Option

Symbol	Option
Nil	None
B (Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D□ (Note 3)	DIN rail mounting (□: Stations 02 to 24)
K (Note 4)	Special wiring spec. (Except double wiring)
N	With name plate
R (Note 5)	External pilot
W	Enclosure: Dust-tight, Water-jet-proof (IP65)


Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BKR

Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) The number of stations that may be displayed is longer than the manifold number of stations.


Note 4) Specify the wiring specifications by means of the manifold specification sheet.

Note 5) Indicate "R" for the valve with external pilot.

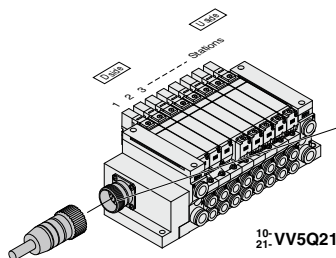

The total number of stations is tabulated starting from station one on the D-side.

 Electrical Wiring Specifications



As the standard electrical wiring specifications, double wiring (connected to SOLA and SOLB) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 562 for details.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 562.)
Refer to "Semi-standard" on page 562 for details.

Circular connector cable assembly

AXT100-MC26-030 015 Wire color 050

Terminal no.	Polarity	Lead wire color	Dot marking
Station 1	SOLA 1 (-)	(+) Black	None
	SOLB 2 (-)	(+) Brown	None
Station 2	SOLA 3 (-)	(+) Red	None
	SOLB 4 (-)	(+) Orange	None
Station 3	SOLA 5 (-)	(+) Yellow	None
	SOLB 6 (-)	(+) Pink	None
Station 4	SOLA 7 (-)	(+) Blue	None
	SOLB 8 (-)	(+) Purple	None
Station 5	SOLA 9 (-)	(+) Gray	Black
	SOLB 10 (-)	(+) White	Black
Station 6	SOLA 11 (-)	(+) White	Red
	SOLB 12 (-)	(+) Yellow	Red
Station 7	SOLA 13 (-)	(+) Orange	Red
	SOLB 14 (-)	(+) Yellow	Black
Station 8	SOLA 15 (-)	(+) Pink	Black
	SOLB 16 (-)	(+) Blue	White
Station 9	SOLA 17 (-)	(+) Purple	None
	SOLB 18 (-)	(+) Gray	None
Station 10	SOLA 19 (-)	(+) Orange	Black
	SOLB 20 (-)	(+) Red	White
Station 11	SOLA 21 (-)	(+) Brown	White
	SOLB 22 (-)	(+) Pink	Red
Station 12	SOLA 23 (-)	(+) Gray	Red
	SOLB 24 (-)	(+) Black	White
(Max.)	COM. 25 (+)	(-) White	None
	COM. 26 (+)	(-) White	None

Positive COM spec. Negative COM spec.

How to Order Valve

Note) For CE compliant models, DC-type only.

CE [Option]

10-VQ 2 1 0 0 - 5 - 1 -

Series
2 VQ2000

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○ (Note 1)	○
B	High-speed response type	(0.95 W) ○	—
K (Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N (Note 3)	Negative common	○	—
R (Note 3)	External pilot	○	○

Actuation type

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center

Seal

0	Metal seal
1	Rubber seal

CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Manual override

B	Non-locking push type (Tool required)
C	Locking type (Tool required)
D	Locking type (Manual)

Light/surge voltage suppressor

Nil	Yes
E	None

Coil voltage

	CE compliant
1 100 VAC (50/60 Hz)	—
3 110 VAC (50/60 Hz)	—
5 24 VDC	●
6 12 VDC	●

Note 1) For power consumption of AC type, refer to page 522.
Note 2) Metal seal only
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 562 to 563.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Circular connector kit with cable (3 m)
10-VV5Q21-09C6M2-W...1 set-Manifold base part no.
*10-VQ2100-51...3 sets-Valve part no. (Stations 1 to 3)
*10-VQ2200-51...3 sets-Valve part no. (Stations 4 to 6)
*10-VQ2300-51...2 sets-Valve part no. (Stations 7 to 8)
*VVQ2000-10A-1...1 set-Blanking plate part no. (Station 9)

Prefix the asterisk to the part no. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side.
When part no. written collectively are complicated, specify them by means of the manifold specification sheet.

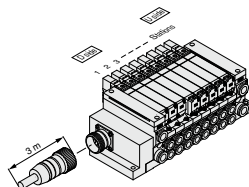

Caution


Use the standard (DC) specification when continuously energizing for long periods of time.

M Series ¹⁰⁻₂₁₋VQ2000 kit (Circular connector)

¹⁰⁻₂₁₋VV5Q21

< >: AC

The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

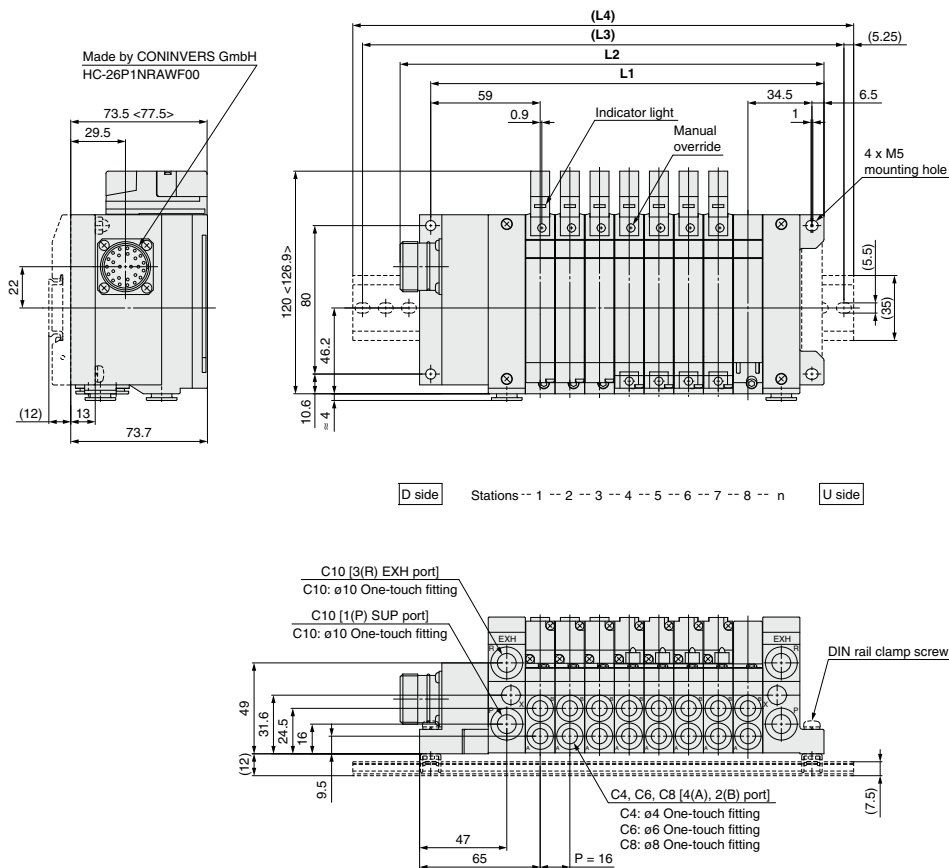

Dimensions

Formula $L1 = 16n + 77.5$, $L2 = 16n + 100.5$ n: Station (Maximum 12 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12
L1		109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5
L2		132.5	148.5	164.5	180.5	196.5	212.5	228.5	244.5	260.5	276.5	292.5
(L3)		162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5
(L4)		173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323

Sub-plate Single Unit

CE
[Option]

Directional Control Valves

In the case of **Valve** + **Sub-plate**

10-VQ2 1 0 0-5 W 1-02 -

- CE compliant

Nil	—
Q	CE compliant

Note) For CE compliant models, DC-type only.

- **Thread type**

Nil	Rc
N	NPT
T	NPTF
F	G





- **Port size**

02	1/4
----	-----

In the case of **(Sub-plate)** alone

VQ2000 – PW – 02

Dimensions

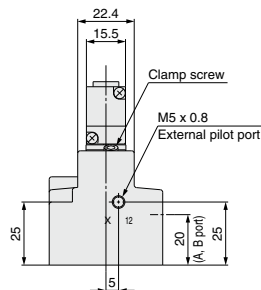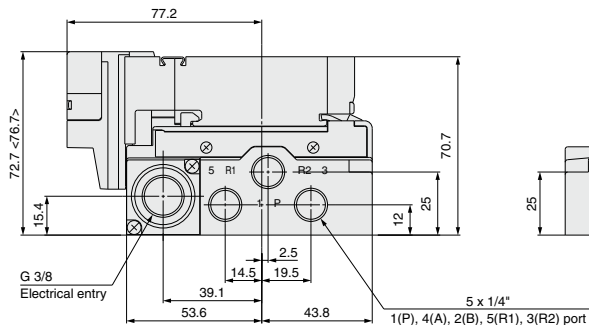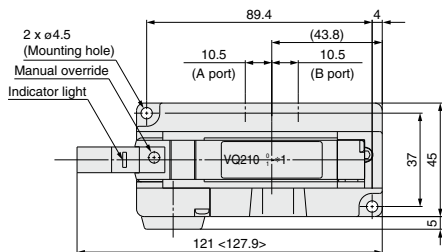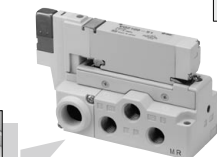

Note) When using this valve for IP65, mount a seal connector to the electrical entry.

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment

Fittings & Tubing


Flow Control
EquipmentPressure Switches/
Pressure Sensors

Semi-standard


Different Number of Connector Pins

F and P kits with the following number of pins are available besides the standard number (F = 25P; P = 26P). Select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

F kit (D-sub connector)
15 pins

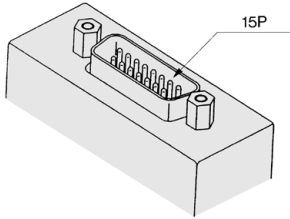


How to Order Manifold

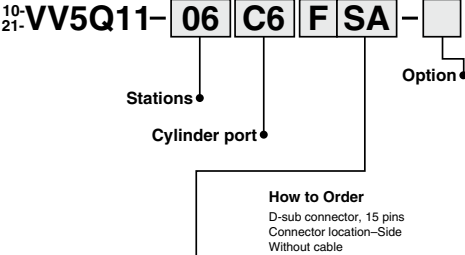

Kit type/Electrical entry •

Pins \ Location	Top entry		Side entry	
15P (Max. 7 stations)	F kit	UA	F kit	SA

* In the same way as the 25-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 9 for SOL.B at the 1st station, and the terminal no. 8 for COM.

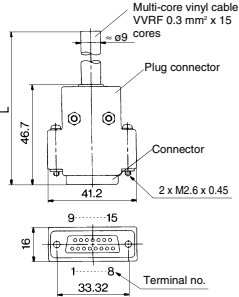

Wire Color Table by Terminal No. of
D-sub Connector Cable Assembly


Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

D-sub Connector Cable Assembly


Cable length (L)	Pins	15P
1.5 m		AXT100-DS15-1
3 m		AXT100-DS15-2
5 m		AXT100-DS15-3

* For other commercial connectors, use a type conforming to MIL-C-24308.

P kit (Flat ribbon cable)
10/16/20 pins

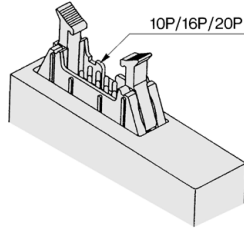


How to Order Manifold

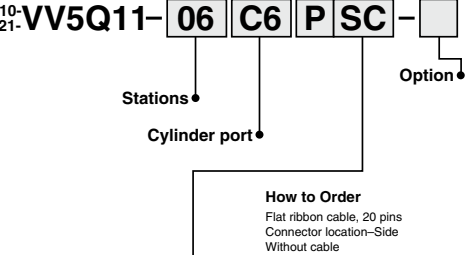

Kit type/Electrical entry •

Location		Top entry		Side entry	
Pins					
10P (Max. 4 stations)		P kit	UA	P kit	SA
16P (Max. 7 stations)			UB		SB
20P (Max. 9 stations)			UC		SC

* In the same way as the 26-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 2 for SOL.B at the 1st station, and two pins from the max. terminal numbers are for COM.

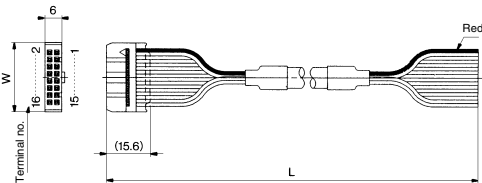

Flat Ribbon Cable Assembly

Cable length (L)	Pins	10P	16P	20P
1.5 m		AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m		AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m		AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)		17.2	24.8	30

* For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.

Special Wiring Specifications

In the internal wiring of F/P/J/G/T/S kit, double wiring (connected to SOL.A and SOL.B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to Order


Indicate an option symbol "K", for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.

10-21-VV5Q11-08C6FU1-D K S

Others, option symbols:
to be indicated alphabetically.

2. Wiring specifications

With the A side solenoid of the 1st station as no.1 (meaning, to be connected to no.1 terminal), without making any terminals vacant.

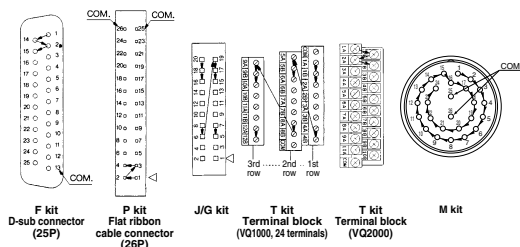

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the max. number given in the following table.

Kit	F kit (D-sub connector)		P kit (Flat ribbon cable)				J kit (Flat ribbon cable)	G kit (Flat ribbon cable with terminal block)
Type	F ^U _{25P}	F ^U _{15P}	P ^U _{26P}	P ^U _{20P}	P ^U _{16P}	P ^U _{10P}	J ^U _{20P}	G ^U
Max. points	24	14	24	18	14	8	16	16

Kit	T kit (Terminal block box)		S kit (Serial transmission)	M kit (Circular connector)
Type	10-21-VQ1000	2 rows of terminal blocks	S ^U	M ^U
		16		
Max. points	10-21-VQ2000	20	16	24

Negative Common Specifications

Specify the valve model no. as shown below for negative common specification.

The manifold no. shown below is for the T (10-VQ1000) and L (10-VQ1000/2000) kits. For other kits the standard manifold can be used. However, negative common is not compatible with S (except EX510 gateway-type, EX240 integrated-type and EX120/121/122 integrated-type (CompoNet®)) and G kits.


How to Order Valve

10-21-VQ1100 N -51


• Negative common specifications

How to Order Manifold

T kit (VQ1000):

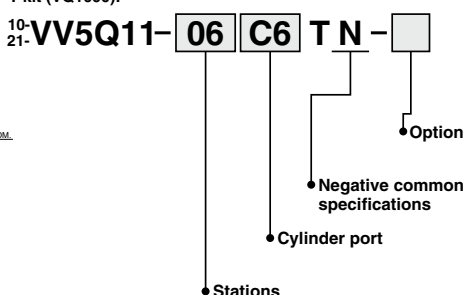

L kit (VQ1000/2000):

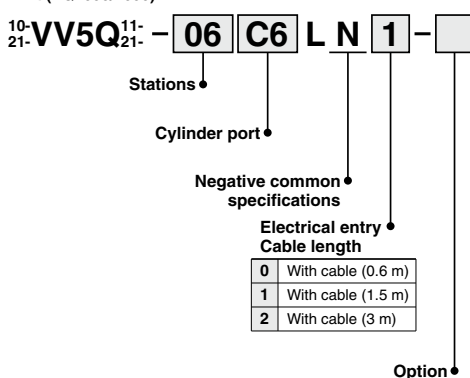

Electrical entry Cable length	
0	With cable (0.6 m)
1	With cable (1.5 m)
2	With cable (3 m)

Option

Semi-standard

External Pilot Specifications

When the supply air pressure is lower than the required minimum operating pressure (0.1 to 0.2 MPa) for the solenoid valve (or when the valve is used for vacuum), specify an external pilot model. Order a manifold or valve by suffixing the external pilot specification, "R". The X-port of the manifold base is equipped with One-touch fittings for external pilot.
VQ1000: C4 (ø4 One-touch fitting)
VQ2000: C6 (ø6 One-touch fitting)

How to Order Manifold

10-
21-VV5Q11-08C6FU1-R S

External pilot specifications

Others, option symbols:
to be indicated alphabetically.

How to Order Valve

10-
21-VQ1100 R - 51

External pilot specifications

Note 1) When two or more functions are specified, indicate them alphabetically.
Note 2) Since the pilot EXH of this valve is released from the R1 passage, it is not possible to vacuum from a part other than EXH pressure and SUP ports.

Inch-size One-touch Fittings

The valve with inch-size One-touch fittings is shown below.

10-
21-VV5Q11-06 N7 PS0-□

Stations

Option

Kit type/Electrical entry

Cylinder port

Symbol	N1	N3	N7	N9	M5T	NM
Applicable tubing O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"	ø5/16"	10-32UNF (MS thread)	Mixed
4(A), 2(B) port	VQ1000	●	●	—	●	●
	VQ2000	—	●	●	—	●

Note) When inch-size fittings are selected for the cylinder port, inch-size fittings are selected on 1(P), 3(R) port, too.

1(P), 3(R) port size
VQ1000 ø5/16" (N9)
VQ2000 ø3/8" (N11)

DIN Rail Mounting

Each manifold can be mounted on a DIN rail. Order it by indicating a DIN rail mounting option symbol, "-D". In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached.

- When DIN rail is unnecessary
(DIN rail mounting brackets only are attached.)
Indicate the option symbol, -D0, for the manifold part number.

How to Order Manifold

10-
21-VV5Q11-08C6FU1-D0 S

Others, option symbols:
to be indicated alphabetically.

- When using DIN rail longer than the manifold with specified number of stations
Clearly indicate the necessary number of stations next to the option symbol "D" for the manifold part number.

How to Order Manifold

10-
21-VV5Q11-08C6FU1-D09 S

DIN rail for 9 stations

Others, option symbols:
to be indicated alphabetically.


*The number of stations that may be displayed is longer than the manifold number of stations.

- When changing to a DIN rail mounting.
Order brackets for mounting a DIN rail. (Refer to "Manifold Optional Parts" on pages 572 and 574.)

No. VVQ1000-57A (For VQ1000)
VVQ2000-57A (For VQ2000)
2 pcs. per one set.

- When ordering DIN rail only
DIN rail no.: AXT100-DR-□

* As for □, specify the number from the DIN rail table.
Refer to the dimensions of each kit for L dimension.

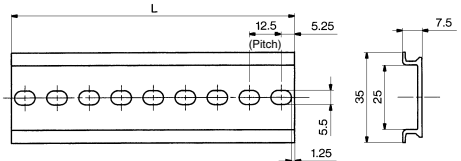

L Dimension


$$L = 12.5 \times n + 10.5$$

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Series 10-21-VQ1000/2000 Construction

10-21-VQ1000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

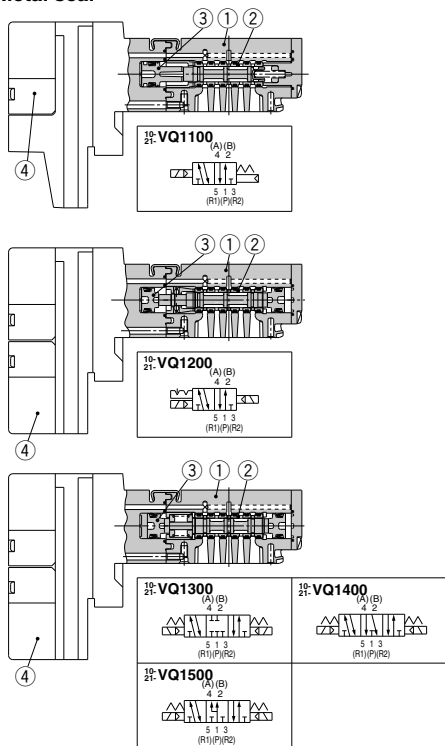


Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	
4	Pilot valve assembly	—	

Note) Refer to page 568 for "How to Order Pilot Valve Assembly".

Rubber seal

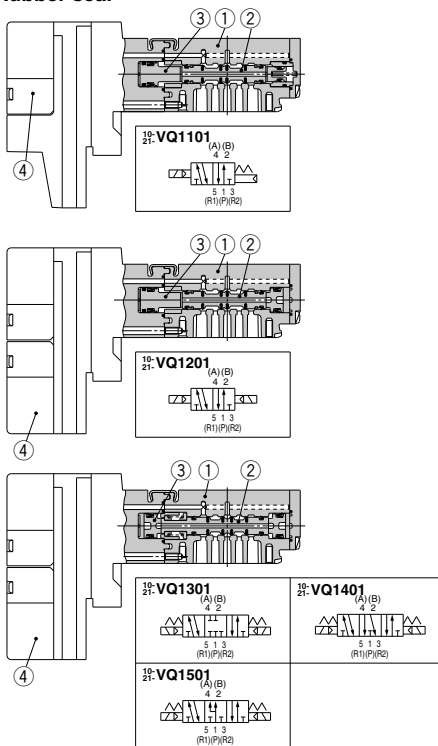

Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool valve	Aluminum, HNBR	
3	Piston	Resin	
4	Pilot valve assembly	—	

Note) Refer to page 568 for "How to Order Pilot Valve Assembly".

Directional
Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation
Equipment

Modular F. R.

Pressure Control
Equipment


Fittings & Tubing

Flow Control
Equipment

Pressure Switches/
Pressure Sensors

10-
21-VQ2000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

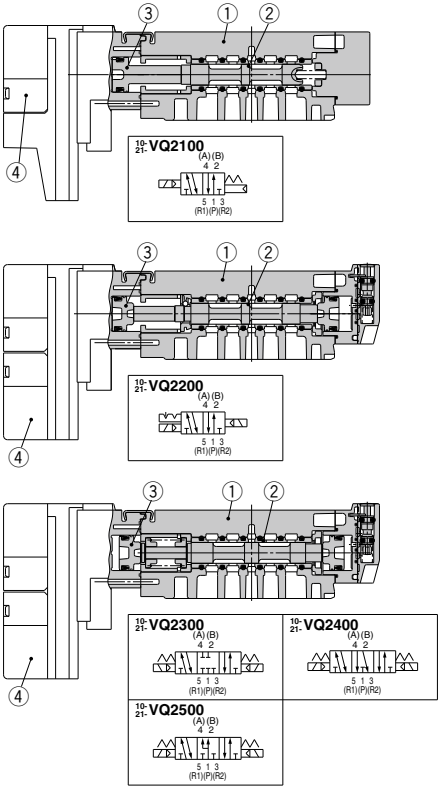


Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	
4	Pilot valve assembly	—	

Note) Refer to page 568 for "How to Order Pilot Valve Assembly".

Rubber seal

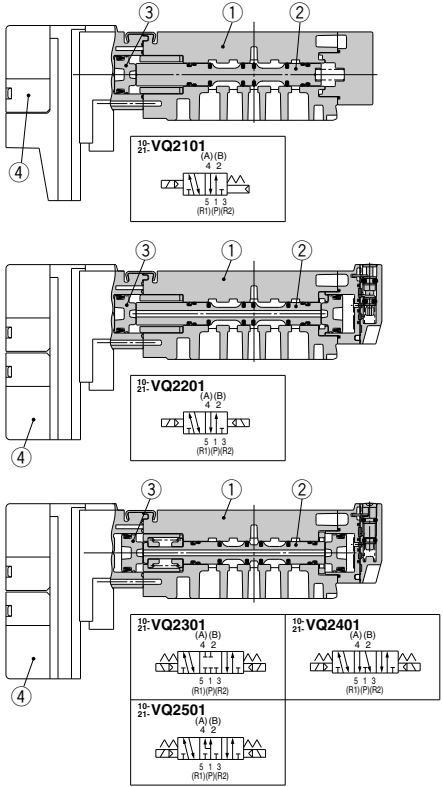

Component Parts

No.	Description	Material	Note
1	Body	Zinc die-casted	
2	Spool valve	Aluminum, HNBR	
3	Piston	Resin	
4	Pilot valve assembly	—	

Note) Refer to page 568 for "How to Order Pilot Valve Assembly".

Pressure Switches/
Pressure Sensors

Flow Control
Equipment

Fittings & Tubing

Pressure Control
Equipment

Modular F. R.

Air Preparation
Equipment

Air Grippers

Rotary Actuators


Air Cylinders

Directional
Control Valves

Exploded View of Manifold

10-
21-VQ1000 Plug-in Unit: Exploded View

(F/P/J/L/S kit)

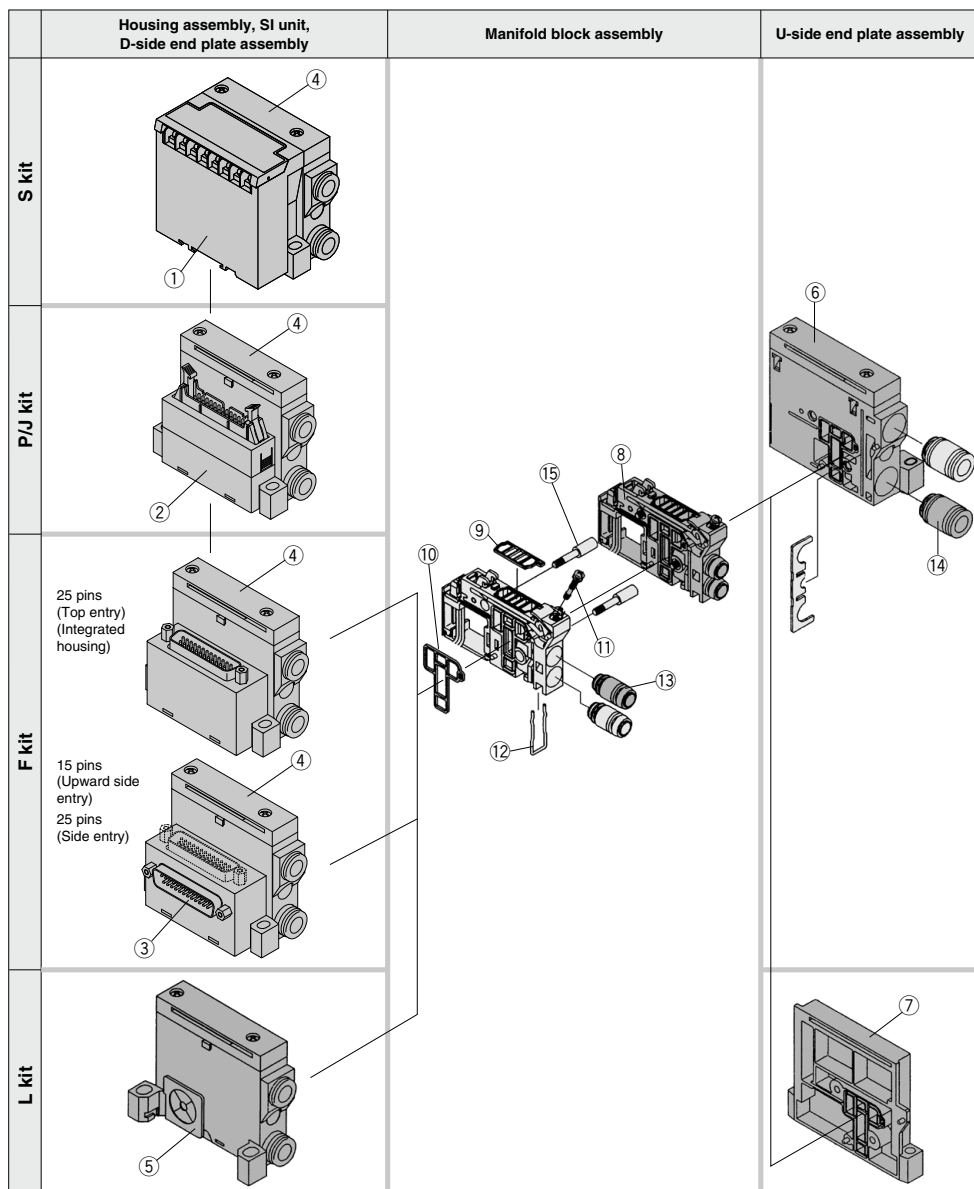

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SH kit)	EX120-SUH1(-XP) Note 2)	NKE Corp.: Fieldbus H System (16 outputs)
	(SQ kit)	EX120-SDN1	DeviceNet®
	(SR1 kit)	EX120-SCS1(-XP) Note 2)	OMRON Corp.: CompoBus/S (16 outputs)
	(SR2 kit)	EX120-SCS2(-XP) Note 2)	OMRON Corp.: CompoBus/S (8 outputs)
	(SV kit)	EX120-SMJ1(-XP) Note 2)	CC-Link
	(SZB kit)	EX120-SCM1	CompoNet® (Positive common)
②	(SZBN kit)	EX120-SCM3	CompoNet® (Negative common)
	P $\frac{3}{4}$ kit	AXT100-1-P$\frac{3}{4}$ Note 1)	Flat ribbon cable housing assembly ☐ = Number of pins: 26/20/16/10
	J $\frac{3}{4}$ kit	AXT100-1-J$\frac{3}{4}$ Note 1)	Flat ribbon cable housing assembly
③	FU kit	AXT100-1-FU15	D-sub connector housing assembly (Top entry) Number of pins: 15
	FS kit	AXT100-1-FS ☐	D-sub connector housing assembly (Side entry) ☐ = Number of pins: 25/15

Note 1) Top entry connector for PU, JU while side entry connector for PS, JS.

Note 2) Suffix "-XP" to the end of the part number for dust-protected SI unit. (Not available for S/SQ kit)

<D-Side End Plate Assembly>

④⑤ D-side end plate assembly no.

VVQ1000-3A-1-☐-☐

Electrical entry ●

FU25	For F kit top entry 25 pins
F	For F kit other than above
P	For P kit
J	For J kit
L	For L kit
S	For S kit

● Option

Nil	Common EXH
R Note 1)	External pilot
S Note 1)	Direct EXH outlet with built-in silencer

Note 1) When both options are specified, indicate as RS.

Note 2) The housing assembly and SI unit of F/P/J/S kit are not included (except FU25). Separately place an order for ①, ②, ③.

<Manifold Block Assembly>

⑧ Manifold block assembly no.

VVQ1000-1A-☐-☐

Electrical entry ●

F0	Without lead wire
F1	F kit for 2 to 12 stations/Double wiring
F2	F kit for 13 to 24 stations/Double wiring
F3	F kit for 2 to 24 stations/Single wiring
P1	P/J/S kit for 2 to 12 stations/Double wiring
P2	P/J/S kit for 13 to 24 stations/Double wiring
P3	P/J/S kit for 2 to 24 stations/Single wiring
L0 ☐	L0 kit ☐ : Stations (1 to 8)
L1 ☐	L1 kit ☐ : Stations (1 to 8)
L2 ☐	L2 kit ☐ : Stations (1 to 8)

● Port size

C3	With ø3.2 One-touch fitting
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
M5	M5 thread
C0	Without One-touch fitting (With clip)

Note) Purchase orders are available in units of 10 pieces.

C3	Applicable tubing ø3.2
C4	Applicable tubing ø4
C6	Applicable tubing ø6
M5	M5 thread

<Replacement Parts for Manifold Block>

Replacement Parts

No.	Part no.	Description	Material	Quantity
⑨	VVQ1000-80A-1	Gasket	HNBR	12
⑩	VVQ1000-80A-2	Seal	HNBR	12
⑪	VVQ1000-80A-3	Clamp screw	Carbon steel	12
⑫	VVQ1000-80A-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

<U-Side End Plate Assembly>

⑥ U-side end plate assembly no. (For F/P/J/S kit)

VVQ1000-2A-1-☐

● Option

Nil	Common EXH
R	External pilot
S	Direct EXH outlet with built-in silencer

Note) The ④'s fitting assembly is included.

⑦ U-side end plate assembly no. (For L kit)

VVQ1000-2A-1-L

<Fitting Assembly>

⑬ Fitting assembly part no. (For cylinder port)

VVQ1000-50A-☐

● Port size

C3	Applicable tubing ø3.2
C4	Applicable tubing ø4
C6	Applicable tubing ø6
M5	M5 thread

⑭ Fitting assembly part no. (For 1(P), 3(R) port)

VVQ1000-51A-C8

● Applicable tubing ø8

Note) Purchase orders are available in units of 10 pieces.

⑮ Tie-rod assembly part no. (2 pcs./set)

VVQ1000-TR-☐

Note 1) Please order when eliminating manifold stations.

When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order.

Note 2) ☐: Stations 02 to 24

Note 3) For S/P/J/F/L kit

Pilot valve assembly

⑩: **V112** ☐-☐

● Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W)	Note 1)
B	High-speed response type	(0.95 W)	—
K	High-pressure type (1.0 MPa)	(0.95 W)	—

● Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

● Enclosure










A	Dust-tight, Water-jet-proof (IP65)
B	Dust-protected

Note 1) Refer to page 522 for power consumption of AC type.

Note 2) Common to single solenoid and double solenoid

10-
21-VQ2000 Plug-in Unit: Exploded View

(F/P/J/L/G/S kit)

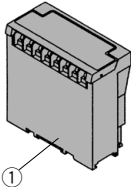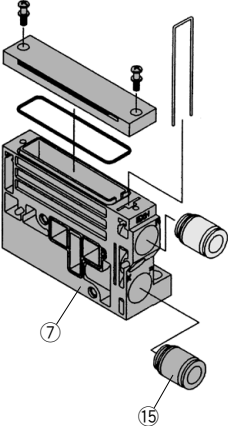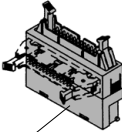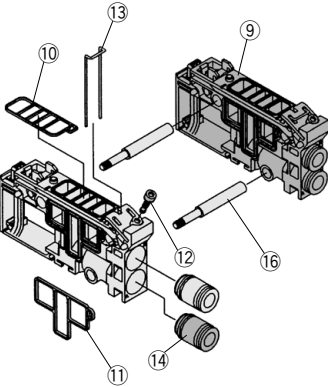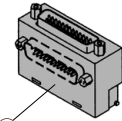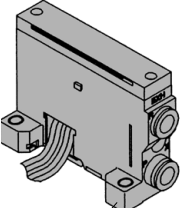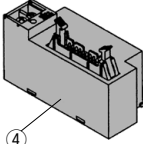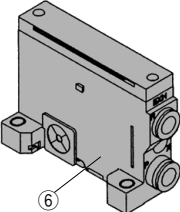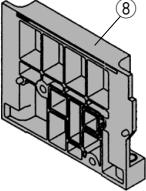	Housing assembly and SI unit	D-side end plate assembly	Manifold block assembly	U-side end plate assembly
S kit				
P/J kit				
F kit				
G kit				
L kit				

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SH kit)	EX120-SUH1(-XP) ^{Note 1)} [EX123D-SUH1] ^{Note 2)}	NKE Corp.: Fieldbus H System (16 outputs)
	(SQ kit)	EX120-SDN1 [EX124D-SDN1] ^{Note 2)}	DeviceNet®
	(SR1 kit)	EX120-SCS1(-XP) ^{Note 1)} [EX124D-SCS1] ^{Note 2)}	OMRON Corp.: CompoBus/S (16 outputs)
	(SR2 kit)	EX120-SCS2(-XP) ^{Note 1)} [EX124D-SCS2] ^{Note 2)}	OMRON Corp.: CompoBus/S (8 outputs)
	(SV kit)	EX120-SMJ1(-XP) ^{Note 1)} [EX124D-SMJ1] ^{Note 2)}	CC-Link
②	(SZB kit)	EX120-SCM1	CompoNet® (Positive common)
	(SZBN kit)	EX120-SCM3	CompoNet® (Negative common)
	P _S kit	AXT100-1-P _S ^{Note 3)}	Flat ribbon cable housing assembly □: Number of pins: 26/20/16/10
③	J _S kit	AXT100-1-J _S ^{Note 3)}	Flat ribbon cable housing assembly
	F _S kit	AXT100-1-F _S ^{Note 3)}	D-sub connector housing assembly □: Number of pins: 25/15
④	G kit	AXT100-1-GU20	Flat ribbon cable housing assembly with terminal block

Note 1) Suffix "-XP" to the end of the part number for dust-protected SI unit.

Note 2) Dust-tight, Water-jet-proof (IP65)

Note 3) Top entry connector for FU, PU, JU while side entry connector for FS, PS, JS.

<D-Side End Plate Assembly>

⑤ ⑥ D-side end plate assembly no.

VVQ2000-3A-1-□-□

Electrical entry	
F	For F kit
P	For P kit
J	For J kit
L	For L kit
G	For G kit
S	For S kit

● Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) F/P/J/G kit are available with "Nil" only.
M kit is available with [W] only.
S/L/T kit are selectable depending on the manifold type.

● Option

Nil	Common EXH
R ^{Note 1)}	External pilot
S ^{Note 1)}	Direct EXH outlet with built-in silencer

Note 1) When both options are specified, indicate as RS.

Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included.

Separately place an order for ①, ②, ③, ④.

Note 3) "S" (Built-in silencer) and "W" (IP65) cannot be combined.

<U-Side End Plate Assembly>

⑦ U-side end plate assembly no. (For F/P/J/G/T/S/M kit)

VVQ2000-2A-1-□-□

● Option

Nil	Common EXH
R	External pilot
S	Direct EXH outlet with built-in silencer

● Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) F/P/J/G kit are available with "Nil" only.
M kit is available with [W] only.
S/T kit are selectable depending on the manifold type.

Note 1) The ②'s fitting assembly is included.

Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included.

Separately place an order for ①, ②, ③, ④.

Note 3) "S" (Built-in silencer) and "W" (IP65) cannot be combined.

⑧ U-side end plate assembly no. (For L kit)

VVQ2000-2A-1-L-□-□

● Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) Select it depending on the manifold type.

<Manifold Block Assembly>

⑨ Manifold block assembly no.

VVQ2000-1A-□-□-□

Tie-rod (2 pcs.) and lead wire assembly for extensions are attached.

● Electrical entry

F0	Without lead wire
F1	F kit for 2 to 12 stations/Double wiring
F2	F kit for 13 to 24 stations/Double wiring
F3	F kit for 2 to 24 stations/Single wiring
P1	P/J/G/S kit for 2 to 12 stations/Double wiring
P2	P/J/G/S kit for 13 to 24 stations/Double wiring
P3	P/J/G/S kit for 2 to 24 stations/Single wiring
L0□	L0 kit □: Stations (1 to 8)
L1□	L1 kit □: Stations (1 to 8)
L2□	L2 kit □: Stations (1 to 8)
T1	T kit for 2 to 20 stations/Double wiring
T3	T kit for 2 to 20 stations/Single wiring
M1	M kit for 2 to 12 stations/Double wiring
M2	M kit for 13 to 24 stations/Double wiring
M3	M kit for 2 to 24 stations/Single wiring

● Port size

C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
C8	With ø8 One-touch fitting
C0	Without One-touch fitting (With clip)

● Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) F/P/J/G kit are available with "Nil" only.

M kit is available with [W] only.
S/L/T kit are selectable depending on the manifold type.

<Fitting Assembly>

⑭ Fitting assembly part no. (For cylinder port)

VVQ1000-51A-□

● Port size

C4	Applicable tubing ø4
C6	Applicable tubing ø6
C8	Applicable tubing ø8

Note) Purchase orders are available in units of 10 pieces.

⑮ Fitting assembly part no. (For 1(P), 3(R) port)

VVQ2000-51A-C10

● Applicable tubing ø10

Note) Purchase orders are available in units of 10 pieces.

⑯ Tie-rod assembly part no. (2 pcs./set)

VVQ2000-TR-□

Note 1) Please order when eliminating manifold stations.

When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order.

Note 2) □: Stations 02 to 24

Note 3) For S/P/J/F/L kit

<Replacement Parts for Manifold Block>

Replacement Parts

No.	Part no.	Description	Material	Quantity
⑩	VVQ2000-80A-1	Gasket	HNBR	12
⑪	VVQ2000-80A-2	Seal	HNBR	12
⑫	VVQ2000-80A-3	Clamp screw	Carbon steel	12
⑬	VVQ2000-80A-4	Clip	Stainless steel	12

 

Note) A set of parts containing 12 pcs. each is enclosed.

10-
21-VQ1000: Manifold Optional Parts

Blanking plate assembly
VVQ1000-10A-1





It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

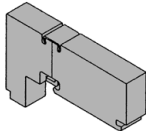

Individual SUP spacer
VVQ1000-P-1-C6
N7

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)


- * Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet.
- * The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)
- * As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.
- * If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

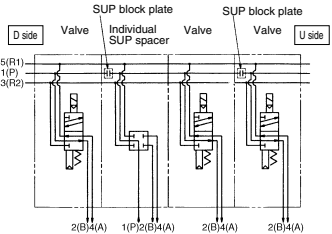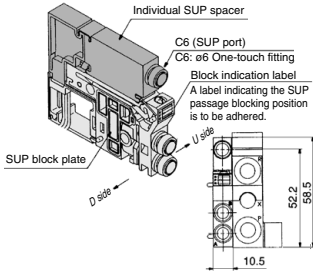


Individual EXH spacer
VVQ1000-R-1-C6
N7

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.) Block both sides of the individual valve EXH station. (Refer to the application example.)

- * Specify the mounting position, as well as the EXH block base or EXH block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set.
- * An EXH block base assembly is used in the blocking position when ordering an EXH spacer incorporated with a manifold no. However, do not order an EXH block base assembly because it is attached to the spacer.
- * When separately ordering an individual EXH spacer, separately order an EXH block base assembly because it is not attached to the spacer.
- * As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.
- * If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

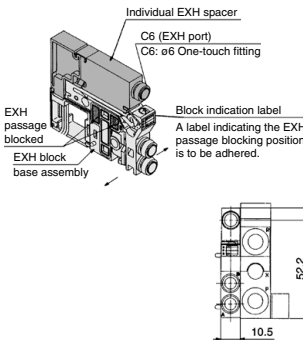



Description/Model		Stations						
Valve	Single		●	●	●			
	Individual EXH spacer							
Option	Individual EXH spacer		●					
	EXH blocking position: Specify 2 places.		●	●				

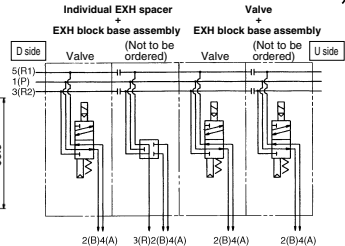

SUP block plate
VVQ1000-16A

When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

- * Specify the mounting position by means of the manifold specification sheet.

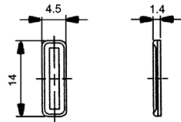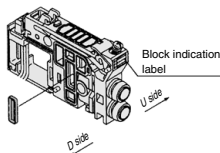

<Block indication label>

Indication labels to confirm the blocking position are attached (Each for SUP passage and SUP/EXH passage blocking positions).

- * When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.



SUP passage blocked



SUP/EXH passage blocked

EXH block base assembly VVQ1000-19A-F (C3/C4/C6/M5/N1/N3/N7)

Manifold block assembly Electrical entry


F0	Without lead wire
F1	For F kit (2 to 12 stations)/Double wiring
F2	For F kit (13 to 24 stations)/Double wiring
F3	For F kit (2 to 24 stations)/Single wiring
P1	For P, G, T, S kit (2 to 12 stations)/Double wiring
P2	For P, G, T, S kit (13 to 24 stations)/Double wiring
P3	For P, G, T, S kit (2 to 24 stations)/Single wiring
L0*	L0 kit
L1*	L1 kit * 1 to 8 stations
L2*	L2 kit

The manifold block assembly is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations due to the circuit configuration. The EXH passage on the D-side is blocked in the EXH block base assembly. It is also used in combination with an individual EXH spacer for individual exhaust.

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)

* When ordering a EXH block base incorporated with a manifold, a block indication label is attached to the manifold.

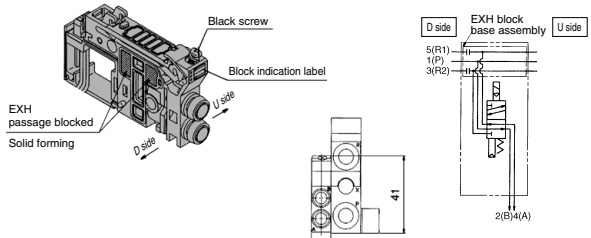

* Specify the mounting station by means of the manifold specification sheet.

* When ordering this option incorporated with a manifold, specify the EXH block base assembly part number with "a" in front of it beneath the manifold part number.



EXH passage blocked





SUP/EXH passage blocked

Back pressure check valve assembly [-B] VVQ1000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

* When ordering it being mounted on all manifold stations, suffix "B" to the end of the manifold part number.

Note) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting station by means of the manifold specification sheet.

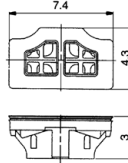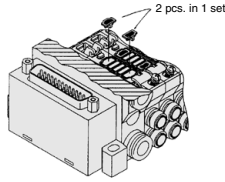

(Precautions)

1. The back pressure check valve assembly is the parts with a check valve structure. However, since the valve has slight air leakage, take precautions for the exhaust air not to be restricted at the exhaust port.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.

Name plate [-N]



VVQ1000-NC-N-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

* When the blanking plate with connector is mounted, it automatically will be "VVQ1000-NC-n".

* When ordering this option incorporated with a manifold, suffix "N" to the end of the manifold part number.

N: Standard
NC: For mounting blanking plate with connector

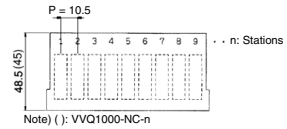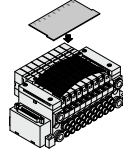


Note) (-): VVQ1000-NC-n

Blanking plug (For One-touch fittings)

KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports.

 Purchase orders are available in units of 10 pieces.



Dimensions



Applicable fitting size ød	Model	A	L	D	Applicable fitting size ød	Model	A	L	D
3.2	KQ2P-23	16	31.5	3.2	1/8"	KQ2P-01	16	31.5	5
4	KQ2P-04	16	32	6	5/32"	KQ2P-03	16	32	6
6	KQ2P-06	18	35	8	1/4"	KQ2P-07	18	35	8.5
8	KQ2P-08	20.5	39	10	5/16"	KQ2P-09	20.5	39	10

Port plug VVQ0000-58A

The plug is used to block the cylinder port.

* When ordering this option incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting station and cylinder port mounting positions 4(A) and 2(B) by means of the manifold specification sheet.

 * Gently screw an M3 screw in the port plug hole and pull it for removal.


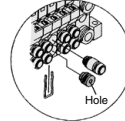


DIN rail mounting bracket [-D, -D0, -D□]

VVQ1000-57A

This bracket is used for mounting the manifold on the DIN rail.

 * When ordering this option incorporated with a manifold, suffix "D" to the end of the manifold part number.

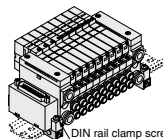



1 set of DIN rail mounting brackets for 1 manifold includes 2 brackets.

10-
21-VQ2000: Manifold Optional PartsBlanking plate assembly
VVQ2000-10A-1

Symbol



 It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.


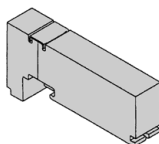
Individual SUP spacer
VVQ2000-P-1-C₈
N₉

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)
* Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)

* As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.

* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

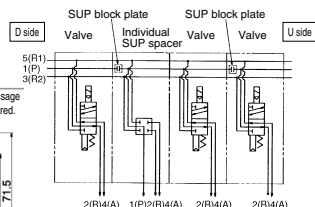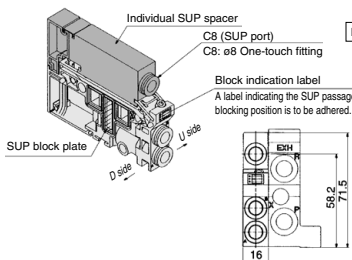Individual EXH spacer
VVQ2000-R-1-C₈
N₉

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)



Block both sides of the individual valve EXH station. (Refer to the application example.)

* Specify the mounting position, as well as the EXH block base or EXH block plate position by means of the manifold specification sheet.

The block plate is used in one or two places for one set. (Two EXH block plates for blocking EXH station are attached to the individual EXH spacer.)

* As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.

* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

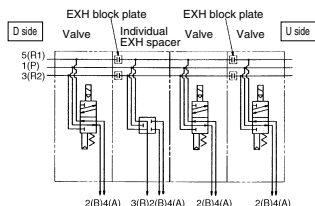
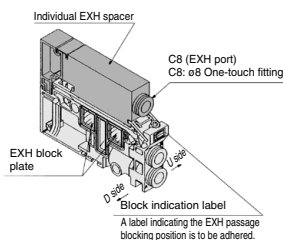
SUP block plate
VVQ2000-16A

When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

* Specify the mounting position by means of the manifold specification sheet.

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for SUP passage and SUP/EXH passage blocking positions)

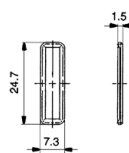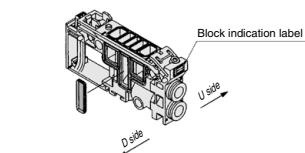

SUP passage blocked

 

SUP/EXH passage blocked

* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

EXH block plate
VVQ2000-19A

The EXH block plate is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations configuration. It is also used in combination with an individual EXH spacer for individual exhaust.

* Specify the mounting position by means of the manifold specification sheet.

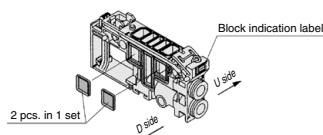

EXH passage blocked

SUP/EXH passage blocked

* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.



Back pressure check valve assembly [-B]

VVQ2000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

• When ordering assemblies incorporated with a manifold, add suffix "-B" to the end of the manifold part number.

 Note) When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position by means of the manifold specification sheet.

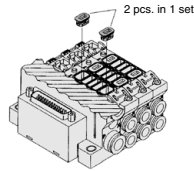

(Precautions)

1. The back pressure check valve assembly is assembly parts with a check valve structure. However, since the valve has slight air leakage, take precautions for the exhaust air not to be restricted at the exhaust port.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.



Name plate [-N]

VVQ2000-N-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc.

Insert it into the groove on the side of the end plate and bend it as shown in the figure.


 
• When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.

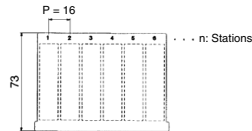

Blanking plug (For One-touch fittings)

KQ2P-□

 It is inserted into an unused cylinder port and SUP/EXH ports. Purchase orders are available in units of 10 pieces.

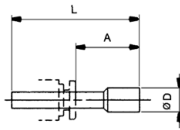

Dimensions


Applicable fitting size ød	Model	A	L	D	Applicable fitting size ød	Model	A	L	D
4	KQ2P-04	16	32	6	5/32"	KQ2P-03	16	32	6
6	KQ2P-06	18	35	8	1/4"	KQ2P-07	18	35	8.5
8	KQ2P-08	20.5	39	10	5/16"	KQ2P-09	20.5	39	10
10	KQ2P-10	22	43	12	3/8"	KQ2P-11	22	43	11.5

DIN rail mounting bracket [-D,-D0,-D□]


VVQ2000-57A

This bracket is used for mounting the manifold on the DIN rail.

• When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.

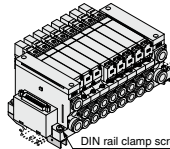

DIN rail clamp screw

 

1 set of DIN rail mounting brackets for 1 manifold includes 2 brackets.

Directional Control Valves

Air Cylinders

Rotary Actuators

Air Grippers

Air Preparation Equipment

Modular F. R.

Pressure Control Equipment

Fittings & Tubing

Flow Control Equipment

Pressure Switches/Pressure Sensors



Series ¹⁰⁻²¹⁻VQ1000/2000

Specific Product Precautions 1


Be sure to read this before handling.

Refer to page 1382 for Safety Instructions and pages 677 to 683 for 3/4/5 Port Solenoid Valve Precautions.

Light/Surge Voltage Suppressor


⚠ Caution

The lighting positions are concentrated on one side for both single solenoid type and double solenoid type. In the double solenoid type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

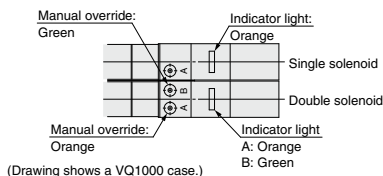


DC circuit diagram

Single solenoid

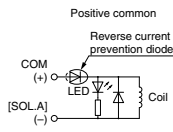

Double solenoid

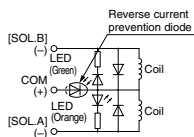

Note) A-side energization:
A light (Orange) illuminates.
B-side energization:
B light (Green) illuminates.


With wrong wiring prevention (stop diode) mechanism
With a surge absorption (surge absorption diode) mechanism

Manual Override

⚠ Warning


Without an electric signal for the solenoid valve the manual override is used for switching the main valve. Push type is standard. (Tool required) Locking type is semi-standard. (Tool required/Manual)

■ Push type (Tool required)

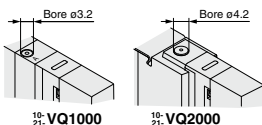


Push down on the manual override with a small screwdriver, etc. until it stops. Release the screwdriver and the manual override will return.

■ Locking type (Tool required) <Semi-standard>

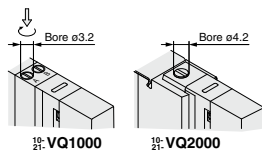

Push down on the manual override with a flat head screwdriver until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

■ Locking type (Manual) <Semi-standard>

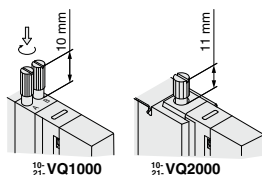

Push down on the manual override with a small flat head screwdriver or with your fingers until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

⚠ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)



Series 10-21-VQ1000/2000

Specific Product Precautions 2


Be sure to read this before handling.

Refer to page 1382 for Safety Instructions and pages 677 to 683 for 3/4/5 Port Solenoid Valve Precautions.

Manual Override

Warning


■ Slide locking type (Manual) <Semi-standard>

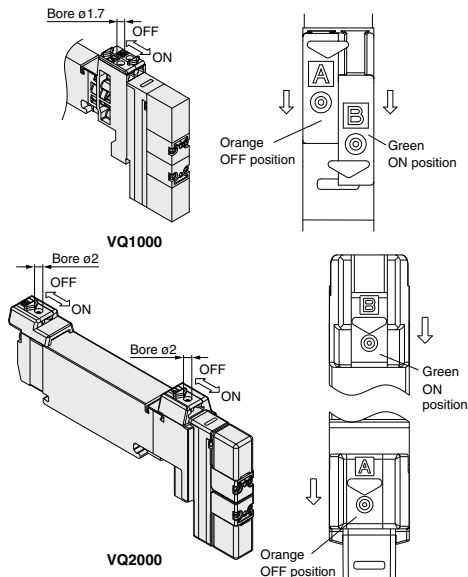

The manual override is locked by sliding it all the way to the pilot valve side (ON side) with a small flat head screwdriver or finger. Slide it to the fitting side (OFF side) to release it. In addition, it can also be used as a push type by using a screwdriver, etc., of ø1.7 or less. (ø2 or less for VQ2000).

How to Mount/Remove Solenoid Valves

Caution

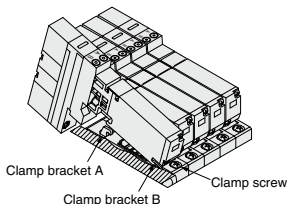

Removing

1. Loosen the clamp screw until it turns freely. (The screw is captive.)
2. Lift the coil side of the valve body while pressing down slightly on the screw head and remove it from the clamp bracket B. When the screw head cannot be pressed easily, gently press the area near the manual override of the valve.

How to Mount/Remove Solenoid Valves

Caution

Mounting

1. Press down on the clamp screw. Clamp bracket A opens. Diagonally insert the hook on the valve end plate side into clamp B.
2. Press the valve body downward. (When the screw is released, it will be locked by clamp bracket A.)
3. Tighten the clamp screw. (Proper tightening torque: VQ1000, 0.25 to 0.35 N·m; VQ2000, 0.5 to 0.7 N·m.)

Caution


Dust on the sealing surface of the gasket or solenoid valve can cause air leakage.

Replacement of Cylinder Port Fittings

Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip. Take out the clip with a flat head screwdriver, etc., then replace the fittings.

For mounting, insert the fitting assembly until it strikes against the inside wall and then insert the clip to the specified position.

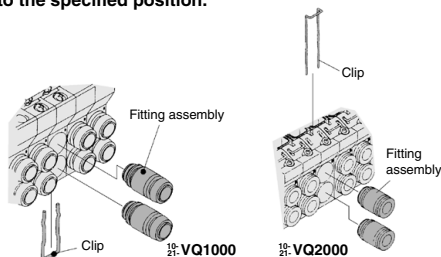

Applicable tubing O.D.	Fitting assembly part no.	
	10-21-VQ1000	10-21-VQ2000
Applicable tubing ø3.2	VVQ1000-50A-C3	—
Applicable tubing ø4	VVQ1000-50A-C4	VVQ1000-51A-C4
Applicable tubing ø6	VVQ1000-50A-C6	VVQ1000-51A-C6
Applicable tubing ø8	—	VVQ1000-51A-C8
M5	VVQ1000-50A-M5	—
Applicable tubing ø1/8"	VVQ1000-50A-N1	—
Applicable tubing ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3
Applicable tubing ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7
Applicable tubing ø5/16"	—	VVQ1000-51A-N9

* Refer to "Manifold Optional Parts" on pages 572 for other types of fittings.

Caution

1. Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
2. After screwing in the fittings, mount the M5 fitting assembly on the manifold base. (Tightening torque: 0.8 to 1.2 N·m)
3. Purchase orders are available in units of 10 pieces.



Series ¹⁰⁻~~21-~~VQ1000/2000

Specific Product Precautions 3

Be sure to read this before handling.


Refer to page 1382 for Safety Instructions and pages 677 to 683 for 3/4/5 Port Solenoid Valve Precautions.

How to Mount/Remove DIN Rail

Caution


Removing

1. Loosen the clamp screw on side (a) of the end plate on both sides.
2. Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

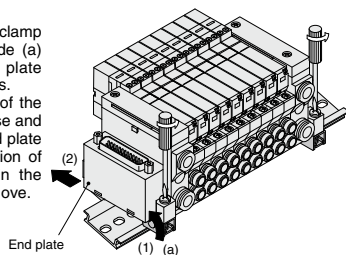

Mounting

1. Hook side (b) of the manifold base on the DIN rail.
2. Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. The proper tightening torque for screws is 0.4 to 0.6 N·m.

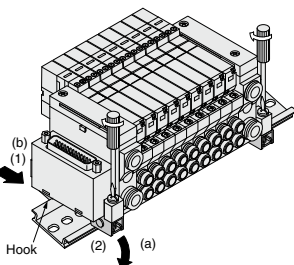

IP65 Enclosure

Caution

Wiring connection for models conforming to IP65 should also have enclosures equivalent to or of stricter than IP65.

How to Calculate Flow Rate

Refer to the **WEB catalog** for obtaining the flow rate.