



Con deceleratore idraulico (BS, BT)

Anteriore

Montaggio sul corpo

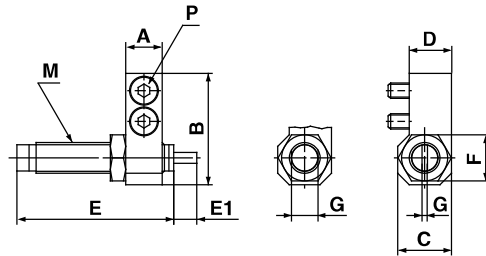

Montaggio sulla tavola

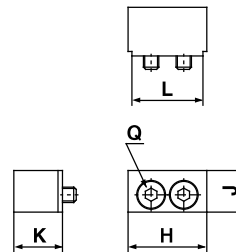


MXQ-BS20 MXQ-BS 8
MXQ-BS25 MXQ-BS12
MXQ-BS16

Unità	Modello	Campo regolazione corsa(mm)	Montaggio sul corpo										Montaggio sulla tavola				
			A	B	C	D	E	E1	F	G	M	P ⁽¹⁾	H	J	K	L	Q ⁽¹⁾
MXQ 8	MXQ-BS 8	20	7	24.5	14	12.5	40.8	5	12	1.4	M8 X 1	M3 X 12	16.6	8	12	14.6	M3 X 12
MXQ12	MXQ-BS12	18	9.5	29	14	11	40.8	6	12	1.4	M8 X 1	M4 X 12	20.5	11	13	18.5	M4 X 12
MXQ16	MXQ-BS16	22	11	36	17	13.5	46.7	7	14	1.4	M10 X 1	M5 X 16	23	13.5	16	21	M5 X 16
MXQ20	MXQ-BS20	35	13	46	22	17.5	67.3	11	19	12	M14 X 1.5	M6 X 18	27	17	22	25	M6 X 20
MXQ25	MXQ-BS25	35	16	54	22	18	67.3	12	19	12	M14 X 1.5	M8 X 18	33	19	22	31	M8 X 20

Nota 1) Dimensione brugola

Posteriore

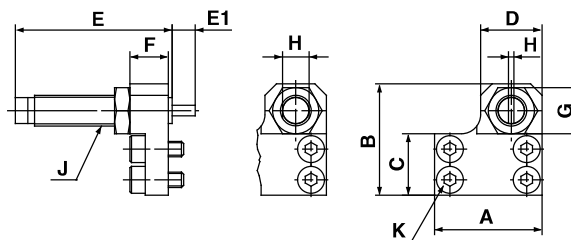

MXQ-BT20
MXQ-BT25

MXQ-BT 8
MXQ-BT12
MXQ-BT16

Unità	Modello	Campo regolazione corsa(mm)	A	B	C	D	E	E1	F	G	H	J	K ⁽¹⁾
MXQ 8	MXQ-BT 8	20	23	24.5	12.5	14	40.8	5	8	12	1.4	M8 X 1	M3 X 8
MXQ12	MXQ-BT12	18	28	29	16	16	40.8	6	10	12	1.4	M8 X 1	M4 X 10
MXQ16	MXQ-BT16	22	33.5	35.5	20	17	46.7	7	12	14	1.4	M10 X 1	M5 X 12
MXQ20	MXQ-BT20	35	43	46	26	25	67.3	11	13	19	12	M14 X 1.5	M5 X 14
MXQ25	MXQ-BT25	35	49	53.5	31	28	67.3	12	15	19	12	M14 X 1.5	M6 X 18

Nota 1) Dimensione brugola